



HALO COMBI RF

Product Code: 222140

Wireless single zone combi Programmable Room Thermostat (PRT)

ERP Class V Boiler+ Compliant

Compatible with the following boilers serial letter code AFQ onwards: Logic Combi C, Logic Combi C IE, Logic Combi ESP1, Logic Code Combi ESP1, Logic+ Combi C, Logic Max Combi C, Logic Max Combi C IE, Vogue Gen2 Combi, Vogue Max Combi, Vogue Max Combi IE.

To install Halo with older boilers a separate bracket is required (Product Code: 220366), for further details on the compatibility of older boilers with Halo plus installation details please go to www.idealboilers.com

The Ideal Halo Combi RF is a wireless PRT that is paired with the Halo Smart Interface installed in the boiler. The Halo Smart Interface plugs into the front aperture on the boiler and communicates to the boiler via OpenTherm. The Halo unit is powered by 4 AA batteries and communicates with the Smart Interface through Zigbee, a local RF protocol.

SAFETY INFORMATION

The Ideal Halo Combi RF must be installed by a competent person with the appropriate safety qualifications. Please read the instructions carefully. Failure to follow these instructions can damage the product or cause a hazardous condition.

These instructions are applicable to the Ideal Boiler models stated and must not be used with any other make or model of boiler. This product must be installed to all applicable standards.

Always isolate the mains supply before installing or working on any components relating to the boiler electronics.


A. KIT CONTENTS




1. Ideal Halo Combi RF display unit




2. Rear housing

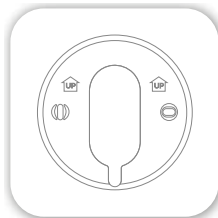

3. Trim plate

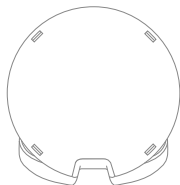


4. Desk stand

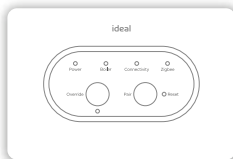

5. Smart Interface



6. Installation guide

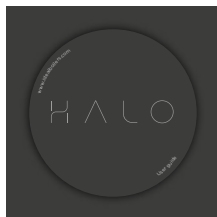

7. User guide



8. SAP registration label



9. 4 x AA batteries




10. Screws & Rawlplugs™


B. LOCATION GUIDELINES

The Halo uses wireless Zigbee communication between the control and the Smart Interface, up to a maximum range of 30 metres. Occasionally house construction and materials can reduce this communication range and it is advisable, where possible, to try and avoid directing communication through metal frames or solid concrete walls.


If the distance between the Halo and Smart Interface is above 30 metres or the install location is challenging, consider using the Ideal Zigbee Booster (Product Code: 221132) or mounting the Smart Interface externally to the boiler using a bracket (Product Code: 220366). Further details on this at www.idealboilers.com

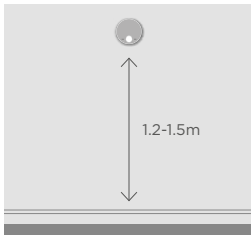


1. Mounted 1.2-1.5m above the floor

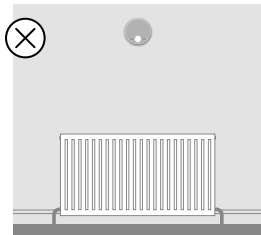


2. Not above a radiator/heat source

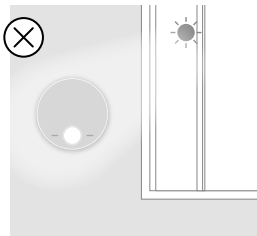


3. Not in direct sunlight

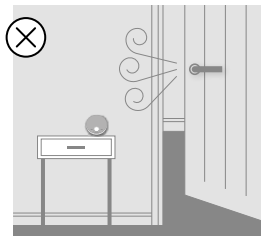

4. Away from any drafts

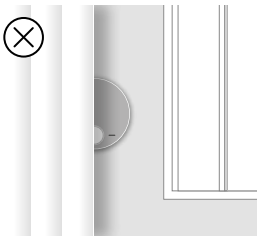

5. Not fitted behind curtains

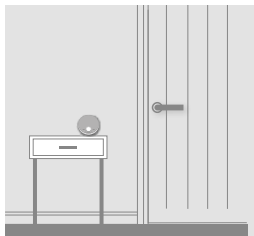



6. Internal use only

C. INSTALLATION OF THE HALO

The Halo can be either wall mounted or desk mounted.



Wall mounting the Halo

If there are any concerns regarding signal strength and location of the wall mounted Halo it is advisable to pair the control (section E) and check signal strength before fixing to the wall.

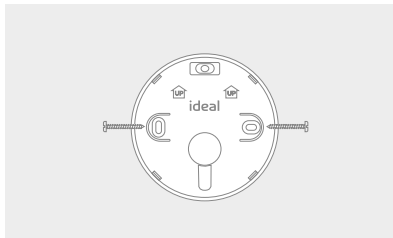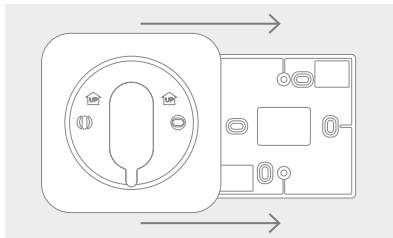

1. The Halo can be installed with or without the provided trim plate.


2. If no trim plate is required, use the rear housing of the Halo to position the unit on the wall, alternatively secure rear housing to trim plate. Take care not to overtighten the screws.

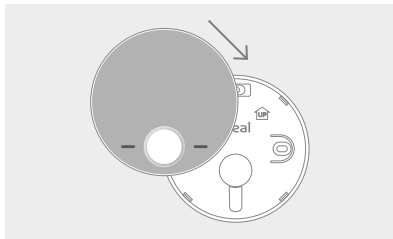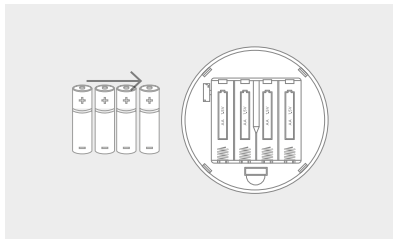


3. Insert the 4 AA batteries provided into the front housing of the Halo. Pay close attention that the orientation of the batteries is as indicated in the housing.

4. Locate the front housing (display) in position parallel to the rear housing and clip into place.


Desk mounting the Halo

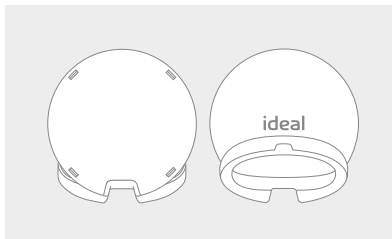

1. The Halo has an integrated rear housing and desk stand.

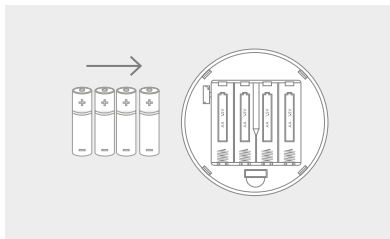


2. Insert the 4 AA batteries provided into the front housing of the Halo. Pay close attention that the orientation of the batteries is as indicated in the housing.

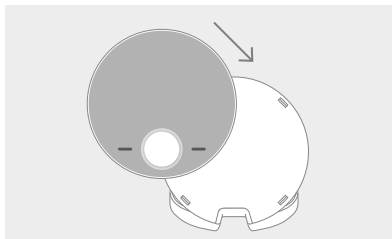


3. Clip the combined rear housing and desk stand into place.

D. INSTALLATION OF THE SMART INTERFACE


To install the Halo Smart Interface into a new boiler with serial letter code AFQ (found on the data plate) follow the steps below. For further details on the compatibility of older boilers and how to install the Smart Interface into a bracket and wire into the boiler please go to www.idealboilers.com

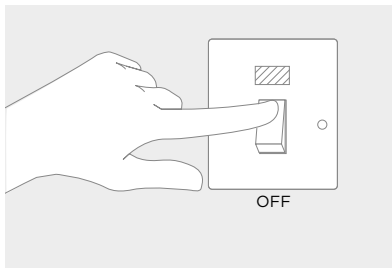


1. Isolate mains supply to boiler.

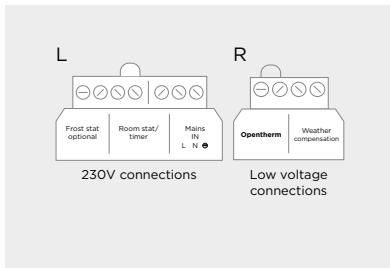


2. Locate the wiring terminals (230V connections are on the left and low voltage on the right).

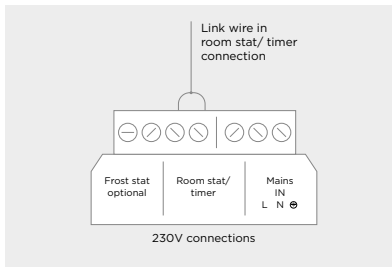


3. If existing 230V device is already installed remove wiring from the 230V connections and add the link wire into the room stat/timer connection (see diagram). On brand new boilers the link will already be in this position.

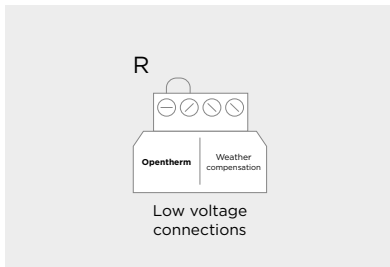


4. If an existing Opentherm device has been used, ensure its removal and add the link wire into the "opentherm" connection (see diagram) On brand new boilers the link should already be in place

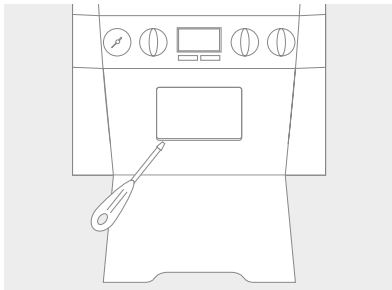


5. Locate the blanking plate on the front of the boiler and remove carefully with a small flat bladed screwdriver.

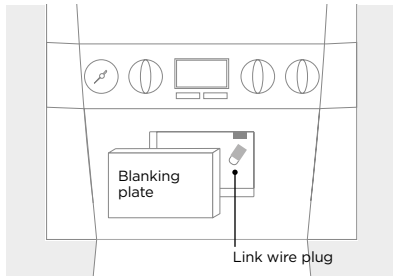


6. Remove link wire plug and keep in a safe place.

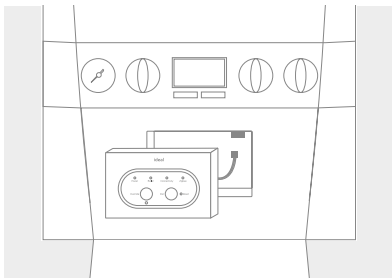


7. Connect the plug on the Halo Smart Interface to the connector in the aperture.

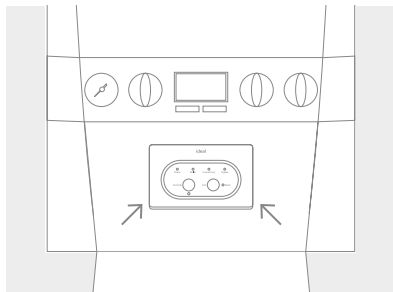


8. Push fit the Halo Smart Interface into the boiler aperture.

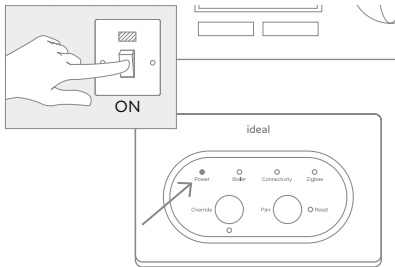

9. Switch on the boiler, the Halo Smart Interface will power up and begin setup, this can take up to 90 seconds. Once setup is complete the green Power LED should be the only LED illuminated.

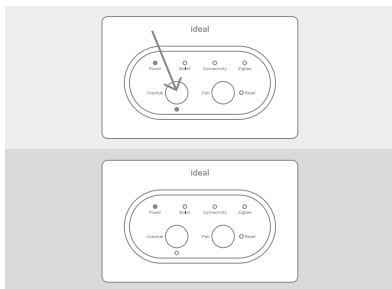

10. Check the Smart Interface connection to the boiler by pressing the Override button. The Override LED should be green and the boiler will fire. Press the Override button again to switch off the boiler, the Override LED should now go out.

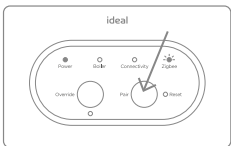


11. **Press and hold** the Pair button on the Smart Interface until the Zigbee LED starts flashing red to begin the pairing process with the Halo.

E. PAIRING OF THE HALO

The Halo unit now needs to be paired with the Smart Interface installed in the boiler.

Ensure the Halo Smart Interface is in pairing mode and the Zigbee LED is flashing red.

1. After the batteries are inserted, the Halo will power up automatically.
2. The device will prompt pairing with the Halo Smart Interface using an easy step-by-step process.
3. Simply follow the on screen guide to select the type of boiler and number of zones. In this case select Combi boiler and single zone.
4. The Halo screen will show "Pairing in Progress", then "Synchronisation in Progress" and then "Pairing Complete" when the Halo has successfully connected to the Smart Interface.
5. The device will automatically prompt set up of the time and date.
6. There is the opportunity to add an installer contact phone number into the device at this stage, if not changed this will default to the Ideal Boilers Customer Service number.
7. The home screen will be displayed showing the current and target temperature and the temperature bar. The Zigbee communication icon will also be visible on the display.
8. **Press and hold** the Pair button on the Halo Smart Interface until the Zigbee LED goes from flashing red to solid green.

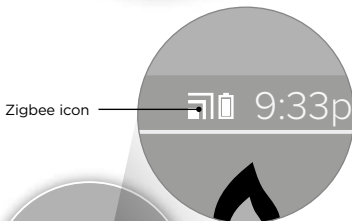

Zigbee icon



G. HALO FEATURES AND CONFIGURATION

To enter the settings menu press the menu button.

Menu options	Action
Holiday	Holiday mode allows the device to be switched off for a pre-defined period of time then automatically returns to the pre-programmed heating schedule.
Timed heating schedule	Set a heating schedule with up to 6 periods per day.
Support	Includes information such as software version and key contact numbers.
Fault page	Shows the latest fault code and fault description.
Time and date	Time and date are set on power up and can be adjusted via the menu.
Advanced settings	Advanced features of the device setup should be set by a competent person.
Landlord settings	Specific settings for landlords.

SMART INTERFACE LED KEY

LED	Status
Power	Green - Power ON No illumination - No Power
Boiler	Green - Demand No illumination - No Demand
Connectivity†	No illumination - Cloud configuration not required for Halo Combi RF
Zigbee	No illumination - No Zigbee network Green - Zigbee network active Green flashing - Identify function Red flashing - Pairing Red flashing then orange - Zigbee network deletion Orange for 30s - Factory reset
Override	Green - Override active* Green flashing - Failsafe active* No illumination - Override OFF*

† Only applicable for Halo Combi Wi-Fi not Halo Combi RF.

* Override and failsafe only active when communication is lost between Halo and Halo Smart Interface. See Halo User Guide for more information.



ADVANCED SETTINGS

Advanced settings should only be adjusted by a competent person, the wrong configuration can have a detrimental effect on the thermostat and the heating system.

Description	Factory setting	New setting
Optimised start Boiler starts heating in advance of schedule so heating reaches the required temperature at the time specified.	OFF	
Optimised stop Boiler stops heating in advance of schedule so heating reaches the required temperature at the time specified.	OFF	
Delayed start If the room temperature is close to target temperature the heating start time is delayed to save energy.	OFF	
Display tolerance Select the display tolerance of the room temperature, this can be set at increments of 0.5 or 0.1°C.	0.1°C	
Temperature offset Fine tune the room temperature display -2.5 to 2.5°C.	0	
Daylight saving time Automatically move to daylight saving.	ON	
Frost protection The temperature that will be used to protect your home when the thermostat is off. Can be set 5°C.	5°C	
Service phone number Opportunity to input Installer contact number for service reminders.	Ideal Boilers number	

COMMISSIONING CHECKLIST

When the Halo is set up use this commissioning checklist to check and complete the install.

Description		Confirmed
Use the "Identify" function to confirm successful pairing has taken place. Short press on the Pair button on the Smart Interface. Press Pair button again to exit "Identify" function.	Zigbee LED on Smart Interface flashes green	
	Halo home screen flashes to indicate successful pairing	
Halo is positioned in the homeowners chosen location if desk mounted.		
Check RSSI (Received Signal Strength Indication) of the Zigbee wireless connection via support page on the PRT (access via the menu).	Target RSSI between 0 and -65 and text green	
On the Halo set the mode to AUTO then increase the temperature to 30°C.	Flame ON	
	Boiler ON	
	Boiler LED on Smart Interface ON (Green)	
On the Halo set the mode to AUTO then decrease the temperature to 5°C.	Flame OFF	
	Boiler OFF	
	Boiler LED on Smart Interface OFF	
Check the Smart Interface indication is correct.	Power LED green Zigbee LED green	
Full battery level indication on Halo home screen.		
Zigbee network icon is present on the Halo home screen.		
Time and date correct.		
Installer contact details inputted if required.		
Suitable schedule has been entered for the user.		
General overview of operation provided to user - refer to use guide.		
Any advanced settings changes have been recorded.		
Remember to leave this guide with the householder.		

TROUBLE SHOOTING

No power LED on Smart Interface	<p>Check Smart Interface is securely plugged into boiler aperture.</p> <p>Check boiler power is on.</p>
Boiler fails to fire when increasing target temperature on the Halo	<p>Check the target temperature is above current temperature.</p> <p>Check Smart Interface power LED is green.</p> <p>Check Smart Interface is securely plugged into boiler aperture.</p>
Halo screen shows failed to pair	<p>Check Smart Interface is in pairing mode (Zigbee LED flashing red).</p> <p>Check distance between Smart Interface and Halo (see section B).</p> <p>Reset Smart Interface by inserting a paperclip or pen tip into reset button.</p> <p>Start pairing mode again on the Smart Interface and press retry on the Halo.</p> <p>If the situation persists then consider using Zigbee Booster (available separately) or mounting the Smart Interface externally to the boiler using a bracket (further details on www.idealboilers.com).</p>
Halo screen shows Replace Halo	<p>If you have no other Halo thermostats connected to the Smart Interface or are not replacing an existing Halo then press accept.</p>
In the support page the Zigbee RSSI is lower than -65 and text red	<p>Consider moving the Halo closer to the Smart Interface.</p> <p>If the situation persists then consider using Zigbee Booster (available separately) or mounting the Smart Interface externally to the boiler using a bracket (further details on www.idealboilers.com).</p>
Deleting Halo from the Zigbee Network	<p>On the Halo press the dial and the right hand key together for 15 seconds, this will delete the Halo from the Zigbee network and factory reset the device.</p>
Deleting Zigbee Network	<p>To delete all devices from the Zigbee network, press and hold the Pair button on the Halo Smart Interface. The Zigbee LED on the Smart Interface will flash red then orange to confirm the devices have been deleted from the network.</p>
Factory reset of the Halo Smart Interface	<p>Press and hold the Pair button and the Override button for 20 seconds.</p> <p>The Halo Smart Interface will delete all Zigbee devices from the network, this will take approximately 20 seconds. On disconnection, the Smart Interface will automatically begin the setup process as per section D6 of the installation guide.</p>



Hereby, Ideal Boilers Ltd declares that this device (model 222140) is in compliance with: Directive **2014/53/EU**.

The full text of the EU declaration of conformity is available at the following internet address **www.idealboilers.com**



UIN: 223827 A02

RF frequency: 2405 -2480MHz
Max. RF output power: 10dBm

Ideal Boilers Ltd
National Avenue
Hull, HU5 4JN

T: 01482 498660
E: enquiries@idealboilers.com