


## MEASURING FOR A MARDOME


Mardome Trade and Ultra Roofdomes are available in square or rectangular sizes from 450mm x 450mm up to 1800mm x 1800mm. The quoted size of the dome is the nominal external size of the dome. The dome itself is slightly larger to provide a small overhang. The quoted size of the dome relates directly to the size of the opening, upstand or kerb required on site (see below). Finished site dimensions are critical for a successful installation. If the opening, kerb or upstand differs from those required, the dome is unlikely to fit.

Measuring guidelines for fitting to Mardome kerb

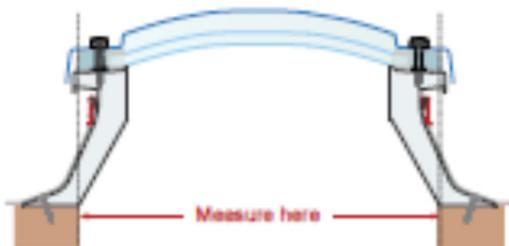


If using a Mardome Trade or Mardome Ultra, 216mm high or 365mm high sloping PVC kerb, measure the internal dimensions of the opening. This is the size of Mardome required.


Measuring guidelines for fitting to builders upstand

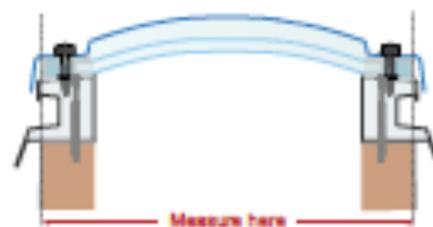

If fitting a Mardome Trade or Mardome Ultra directly to the builder's upstand, measure the external dimensions of the upstand. This is the size of Mardome required. There is a small tolerance on these dimensions, of -20mm and +20mm unvented and -20mm +40mm vented. The upstand must be at least 150mm high and at least 75mm thick.

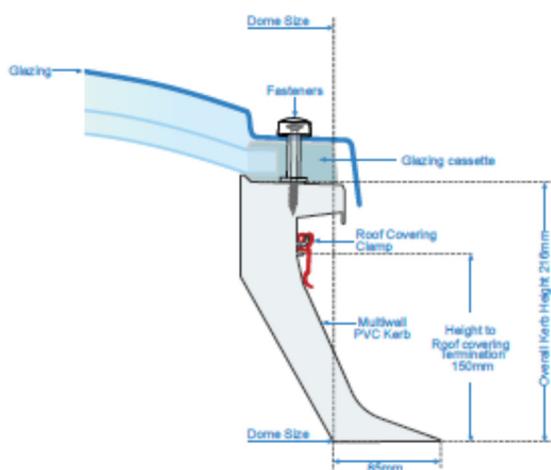

Mardome Trade  
with Standard Kerb Cross Section

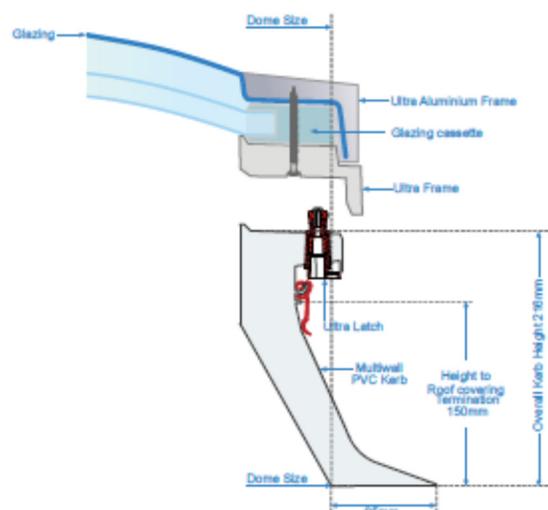

Mardome Ultra with Standard  
Kerb Cross Section