

PU6 LIGHTS – BULB REPLACEMENT INSTRUCTIONS

<p>① Switch 'OFF' at mains</p>		
<p>②</p> <p>UNDER NO CIRCUMSTANCES USE THE OLD 'O' RING</p> <hr/> <p>DO NOT GET THE OLD & NEW 'O' RING MIXED UP!</p>	<p>③</p> <p>LAMP HOLDER</p> <p>LAMP HOLDER LOCK</p> <p>2. PRESS AND HOLD LAMP HOLDER LOCK IN DIRECTION OF ARROW.</p> <p>3. TURN FRONT COVER</p> <p>LAMP HOLDER ASSEMBLY</p> <p>LAMP CLAMP RING</p> <p>FRONT COVER</p> <p>1. FIT FRONT COVER ONTO LAMP CLAMP RING</p>	<p>④</p> <p>LAMP ALIGNMENT RIBS</p> <p>LAMP ALIGNMENT LUGS</p> <p>'O' RING</p> <p>LAMP HOLDER</p>
<p>⑤ CORRECT</p> <p>Check before & during assembly that the 'O' ring is properly in its seating.</p>	<p>⑥ WRONG</p> <p>Do NOT use lubricants on 'O' ring.</p>	<p>⑦ PU6 BULB 300 Watt 12 Volt</p> <p>Ensure contacts are clean with emery cloth provided and screws are securely tightened before replacing bulb into light housing.</p>
<p>ALWAYS ASK FOR Certikin PRODUCTS <i>and 'spare' a thought for the future</i></p>		