

PRODUCT INSTRUCTIONS

Product Code	1715C	Product Description	15mm Monument Autocut®
Product Code	1721V	Product Description	21mm Monument Autocut®
Product Code	1722Y	Product Description	22mm Monument Autocut®
Product Code	1727N	Product Description	27.4mm Monument Autocut®
Product Code	1728Q	Product Description	28mm Monument Autocut®

The use of a pipe cutter rather than a hacksaw during installation of pipework avoids swarf entering systems, which can cause problems on commissioning; using a pipe cutter assures a square and even cut.

- Do NOT use on thick walled gas and steam pipe.
- The Monument Autocut® is self adjusting
- Rotate the Monument Autocut®, in the direction shown on the pipe cutter, until the pipe is cut through.
- Do NOT attempt to move the tool sideways before completing the cut.
- Can be used in conjunction with Ratchet Handles (Fig 1).

MAINTENANCE :

- Keep Monument Autocut® clean and oiled, avoiding accumulation of fluxes.

REPLACING THE WHEEL (Fig 2):

- Remove the screw, separate housing and remove wheel.
- Fit the new wheel, replace housing and screw.

SPARE WHEEL :

To cut copper pipe ONLY, use : **269N** - fits Monument Autocut® 1715C 1721V 1722Y 1727N 1728Q.

