

# **INSTRUCTION MANUAL MOBILE SAFETY STEPS**

# CONTENTS

---

<b>Safety First</b> .....	<b>3</b>
<b>Assembly Configurations</b> .....	<b>3</b>
<b>Component List</b> .....	<b>4 - 5</b>
<b>Build Method</b> .....	<b>6 - 15</b>

# SAFETY FIRST

---

## Introduction

Please read this manual carefully and completely before starting work. Please note that diagrams are for illustrative purposes only. User guides are also available to download from our website at [www.wernerco.co.uk](http://www.wernerco.co.uk). If you need further information, additional guides or any other help with this product, please contact WernerCo. on +44 (0) 1621 745900 or email [uk.customercare@wernerco.com](mailto:uk.customercare@wernerco.com).

### WARNING


Failure to comply with all instructions may result in serious injury.  
Before assembling this product, identify all components.  
If any components are missing or damaged, return to the place of purchase.  
Do not substitute any components.

### ATTENTION


For goods returns, this package must be in original condition.  
If the contents are opened and or partially assembled they will not be accepted as a returnable item.

## ASSEMBLY CONFIGURATIONS


---

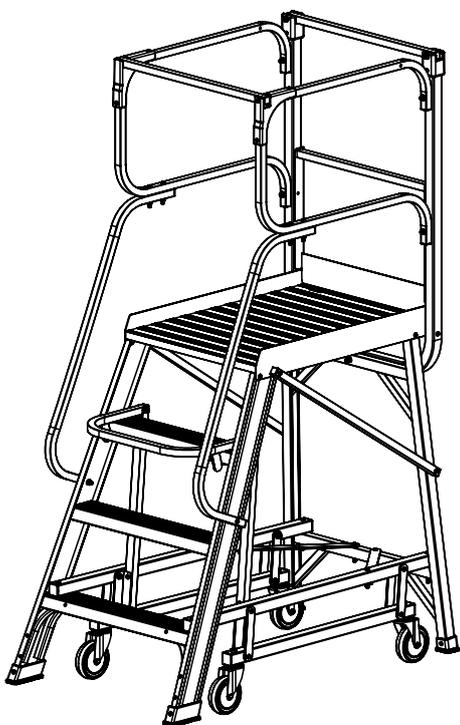

**Standard Configuration**

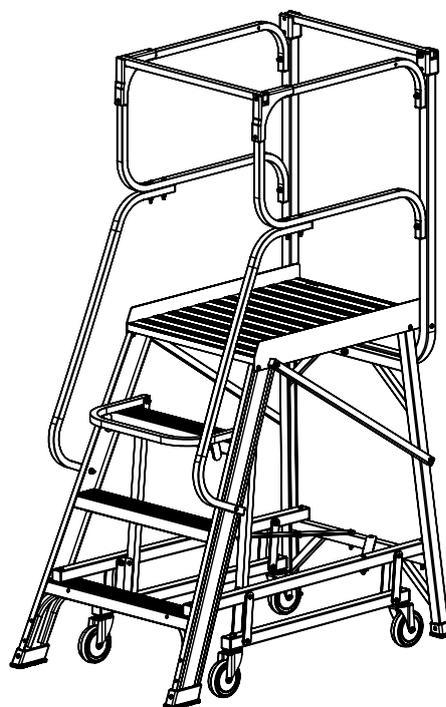

**Walk Thru' Configuration**

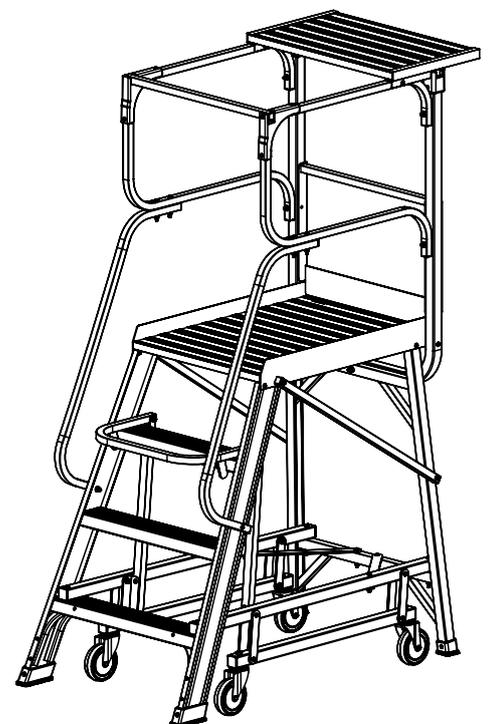


**Shelf Configuration  
(Shelf sold separately)**


*Images feature the 4 Tread Mobile Safety Steps, but the same instructions apply to all sizes.*

# COMPONENT LIST


---

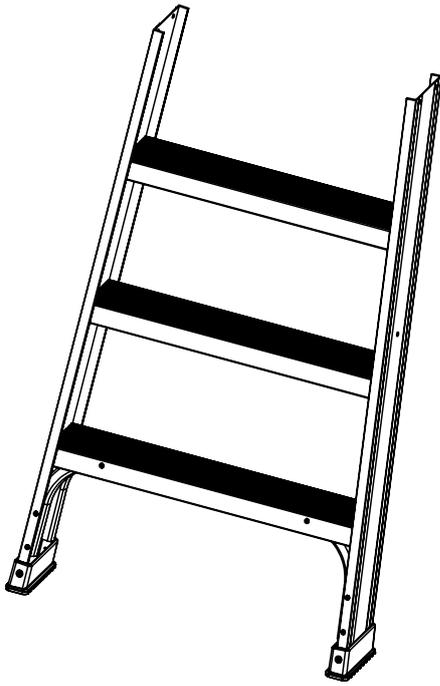


**Front Section**

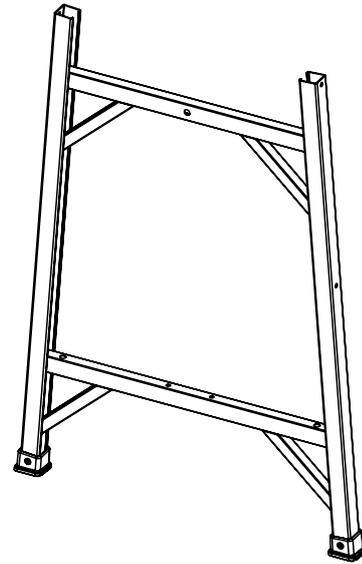


**Rear Section**

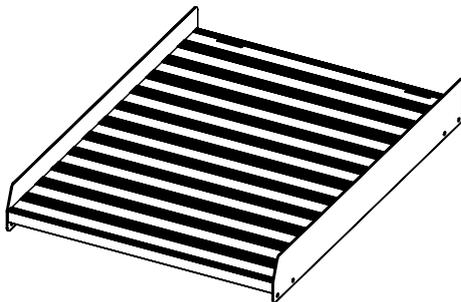


**Platform**

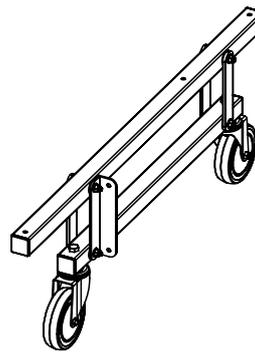

**LHS  
Wheel System**

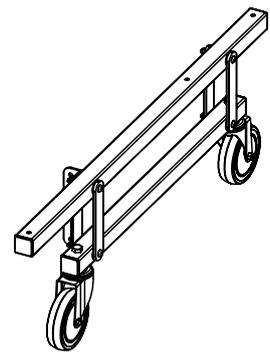


**RHS  
Wheel System**

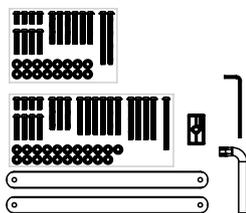

**Component Kit**


- Fastener Kit A
- Fastener Kit B
- Plan Brace (x2)
- Plastic Wedge Spacer
- Bent Tube Spanner
- Allen Key

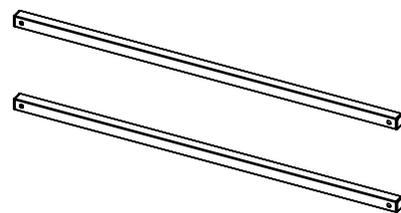


**Side Brace (x2)**

# COMPONENT LIST


---

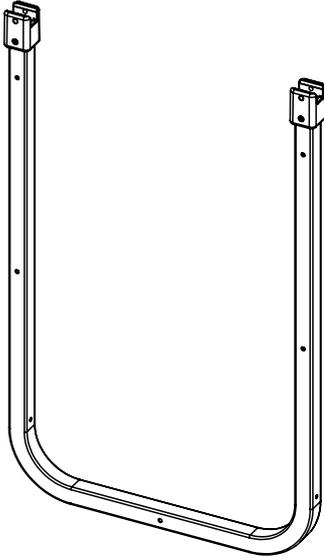


**Rear Upright**

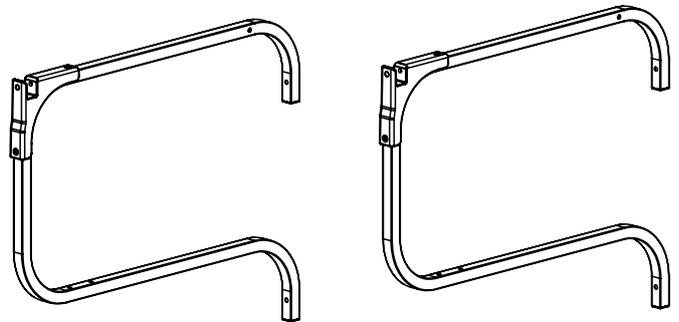


**Top Handrail (x2)**

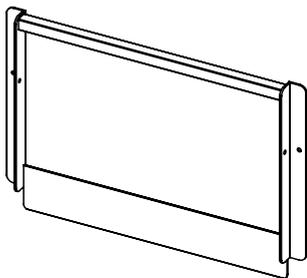


**Rear Panel**

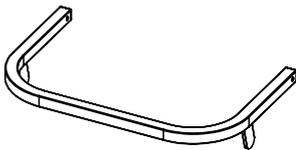


**Handle**

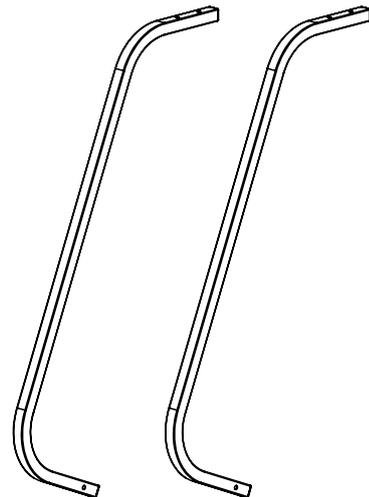


**Bottom Handrail (x2)**

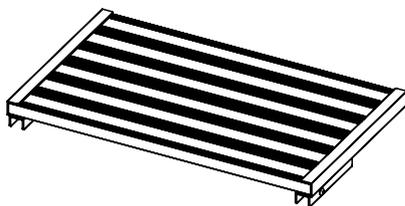

**Shelf Kit  
(sold separately)**

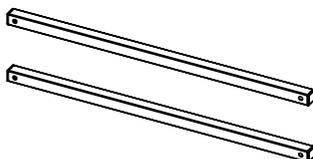

**Safety Gate (x2)**

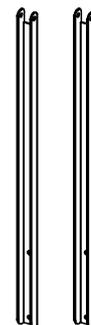



**Handlever (x2)**

# BUILD METHOD


## Step 1 ▶

Assemble Platform and Front Section.

Do not tighten any fasteners until after Step 5.

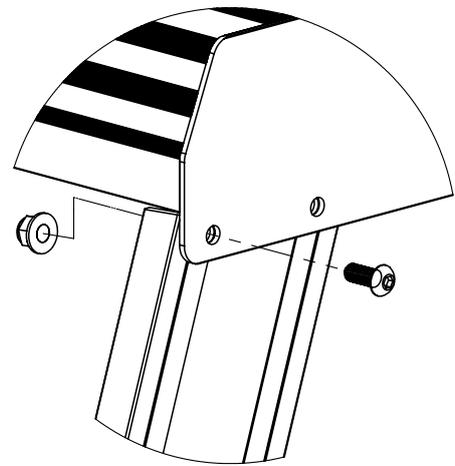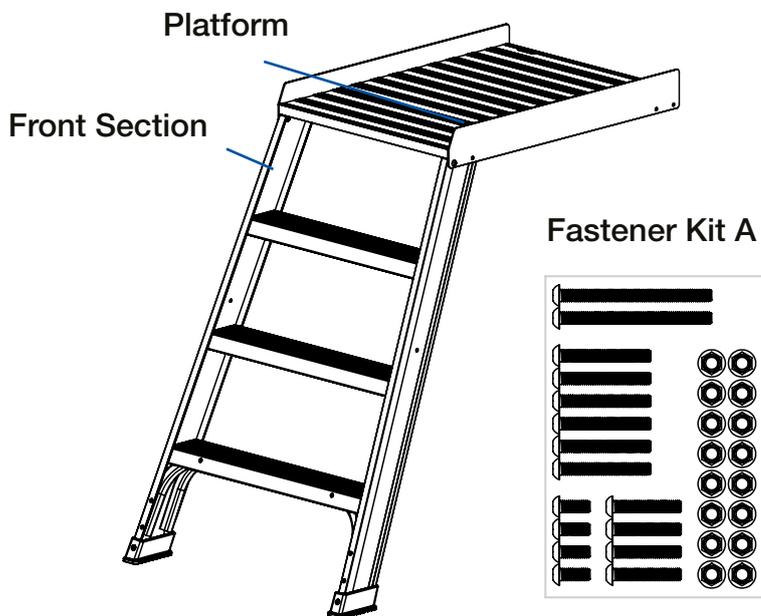


Sizing Template for  
M8X20mm Screws (x2)


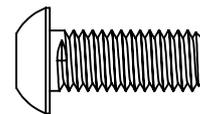


## Step 2 ▶


Assemble Platform and Rear Section.

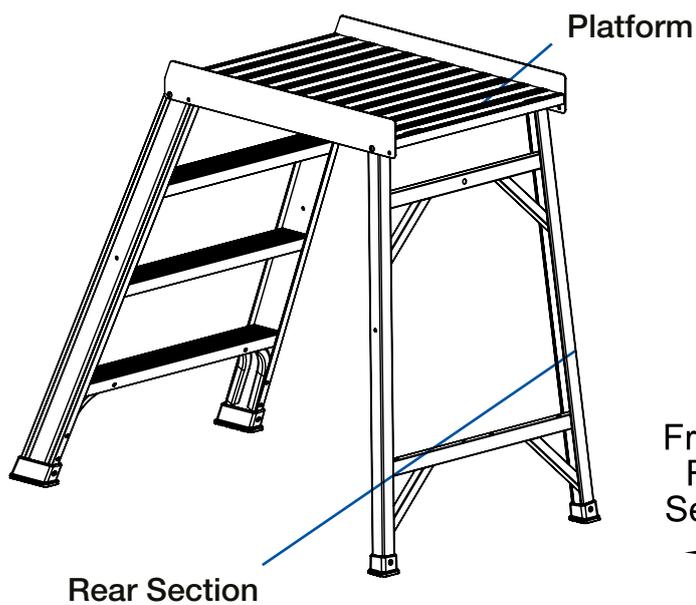

Front of  
Rear  
Section

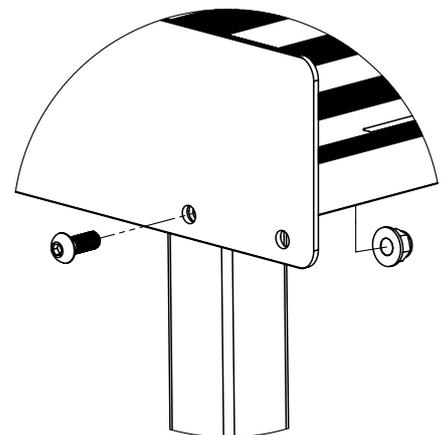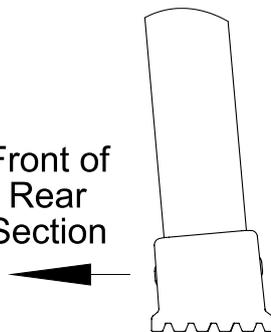

Sizing Template for  
M8X20mm Screws (x2)


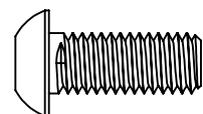


# BUILD METHOD


---

## Step 3 ▶

Assemble Side Braces to Platform Front Section.

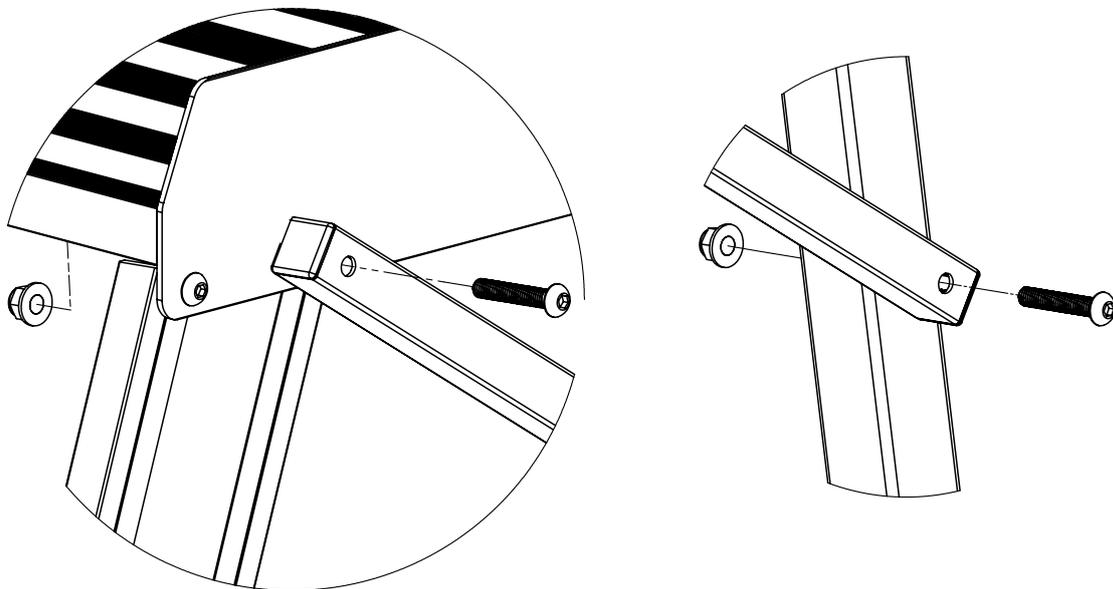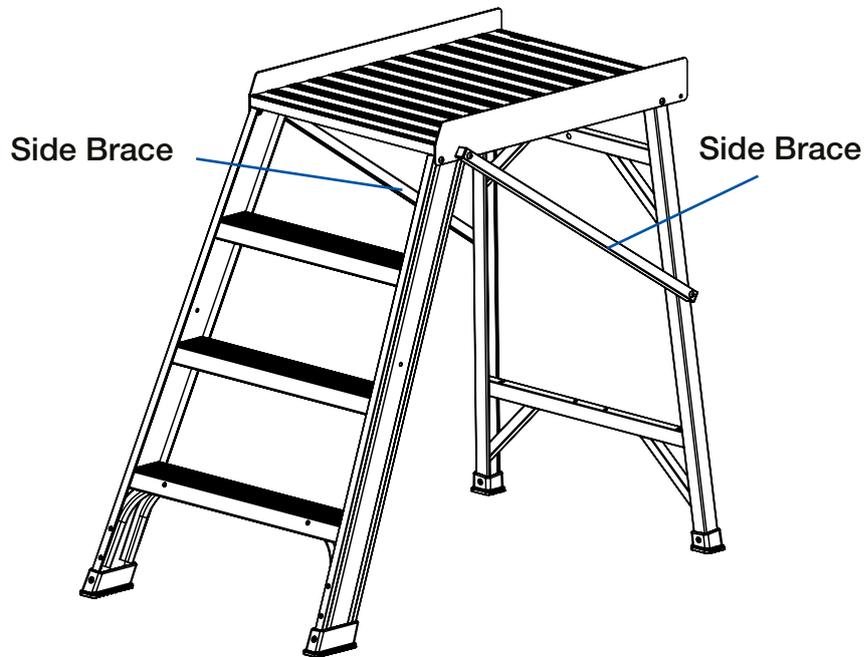

M8X45mm Screws (x4)


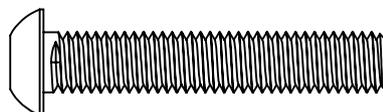


# BUILD METHOD

---


## Step 4 ▶

Assemble LHS and RHS Wheel Systems to Front Section and Rear Section.

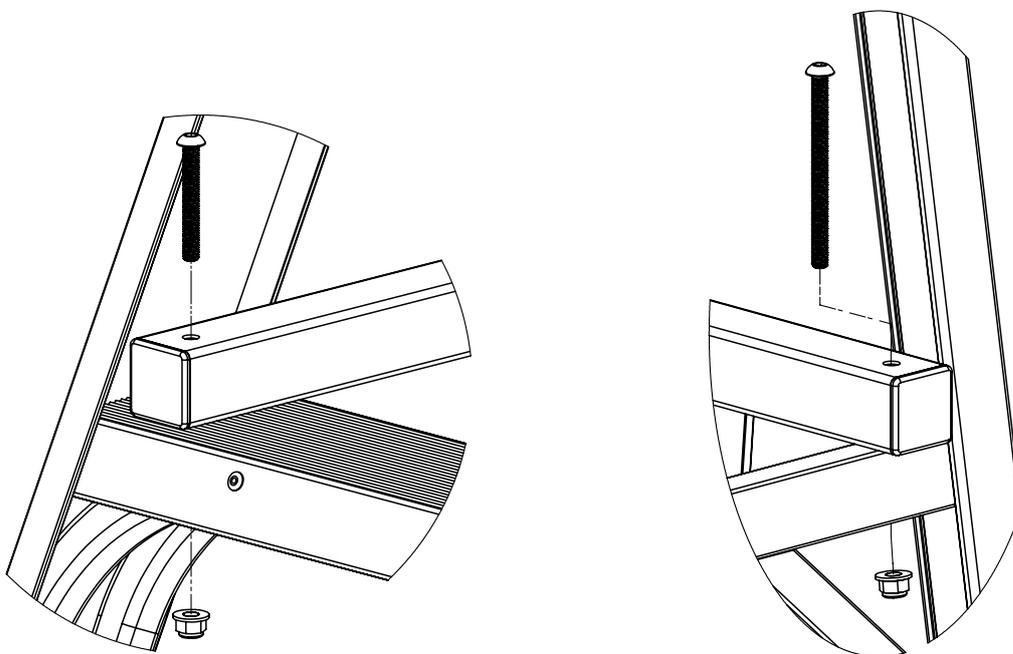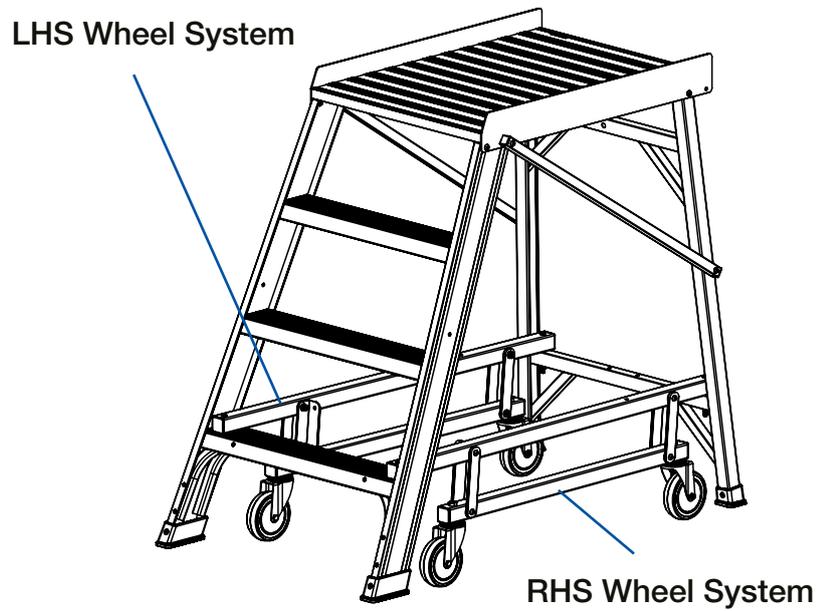

M8X60mm Screws (x2)


M8X100mm Screws (x2)

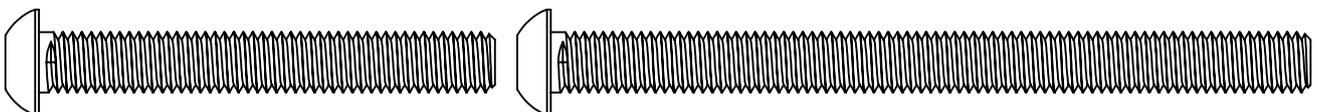


# BUILD METHOD

## Step 5 ▶


Assemble Plan Braces to Wheel Systems and Rear Section.

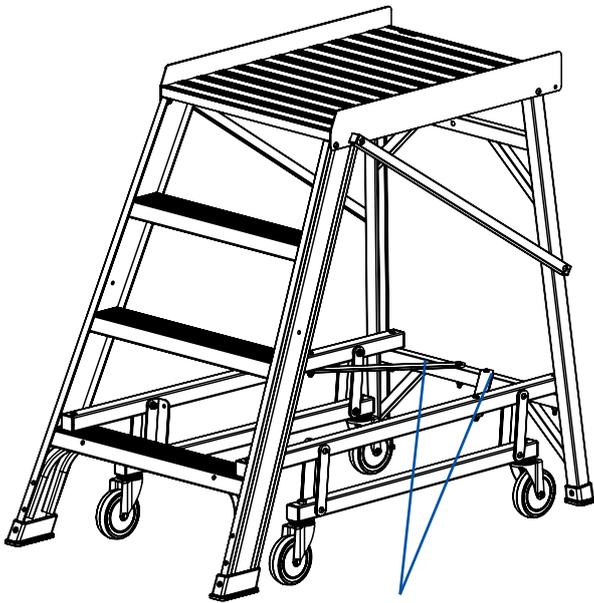

Plan Braces

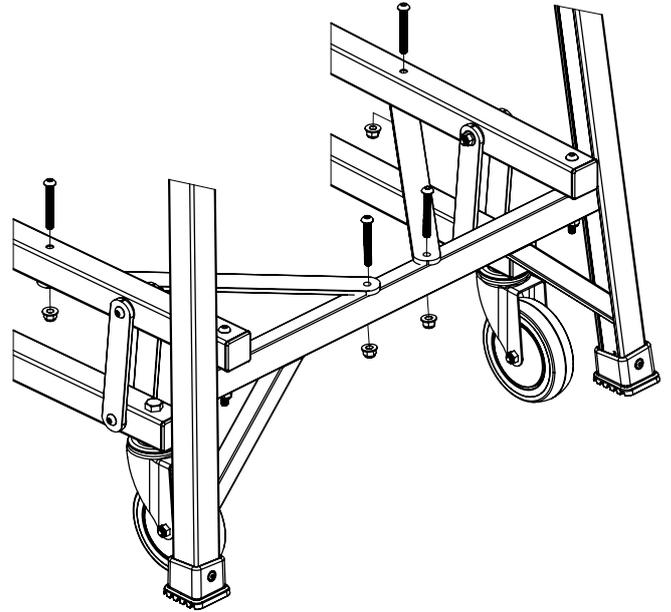


M8X60mm Screws (x4)

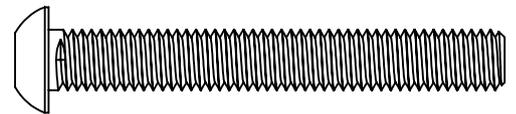

**Firmly tighten all fasteners assembled in Steps 1 to 5.**

Use the Bent Tube Spanner and Allen Key supplied in the Component Kit.  
Do not over-tighten Fasteners.

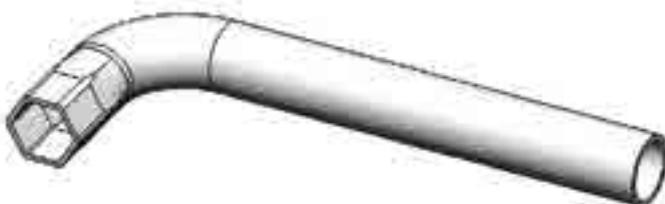





# BUILD METHOD


## Step 7 ▶

Assemble Handle to Handelevators.

Handle

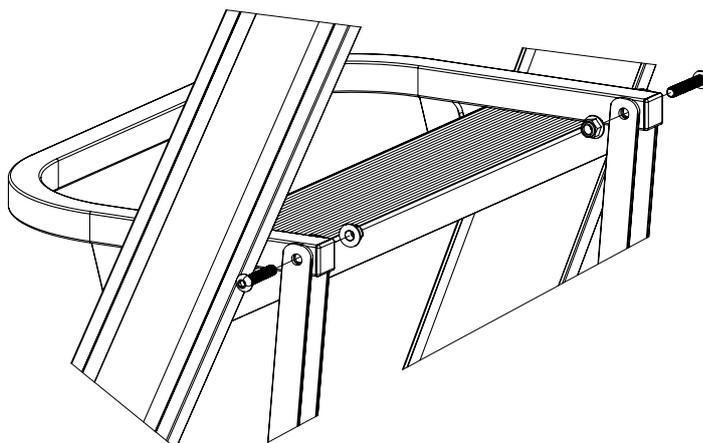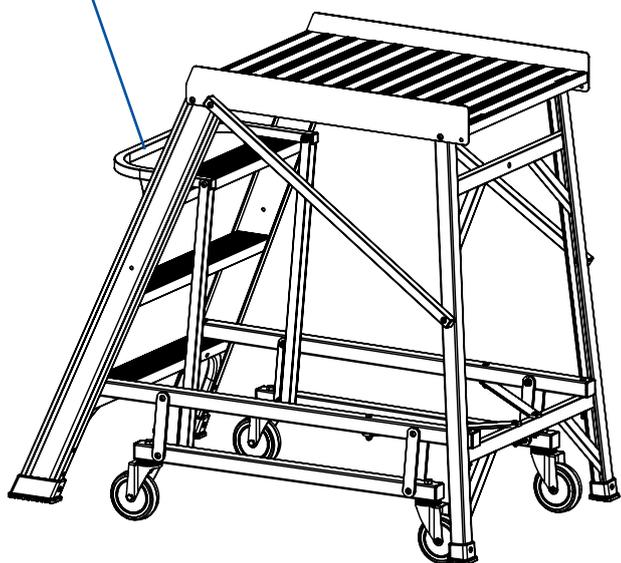

M8X45mm Screws (x2)


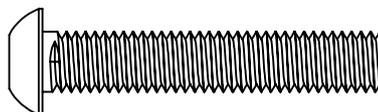


## Step 8 ▶

Assemble Rear Upright to Platform.

Rear Upright


Wedge Spacer

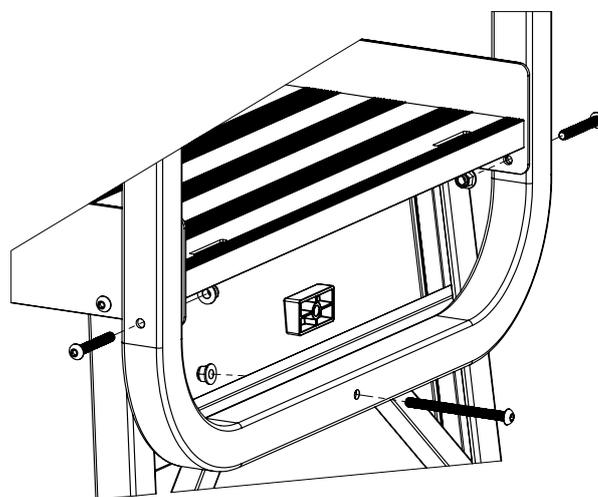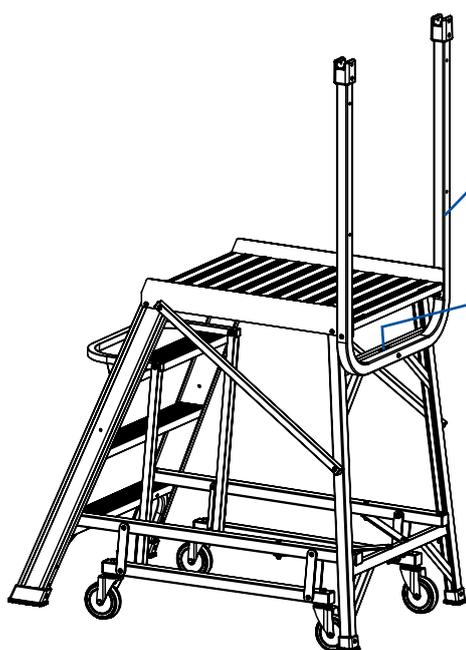

M8X60mm Screws (x2)



M8X100mm Screws (x1)

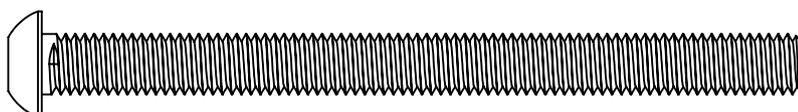


# BUILD METHOD


## Step 9 ▶

Assemble Rear Panel to Rear Upright


Skip this step when assembling The Walk Thru' Configuration.

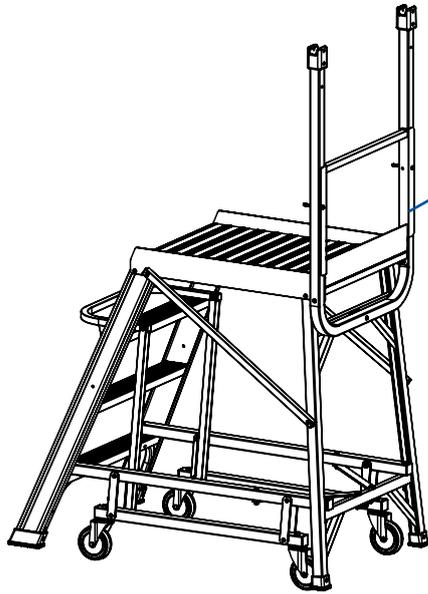

Rear Panel

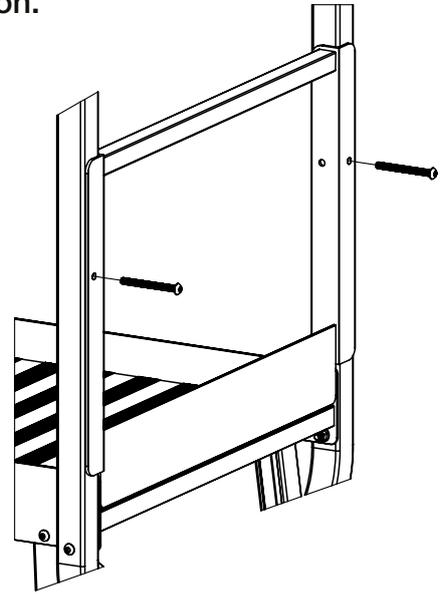

M8X80mm Screws (x2)


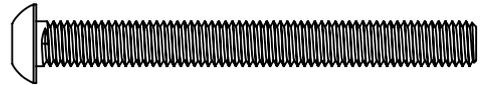


## Step 10 ▶


Assemble Top Rail Handrail to Rear Upright

Safety Gate Pivot position can be assembled on the LHS or RHS.

Top Handrails

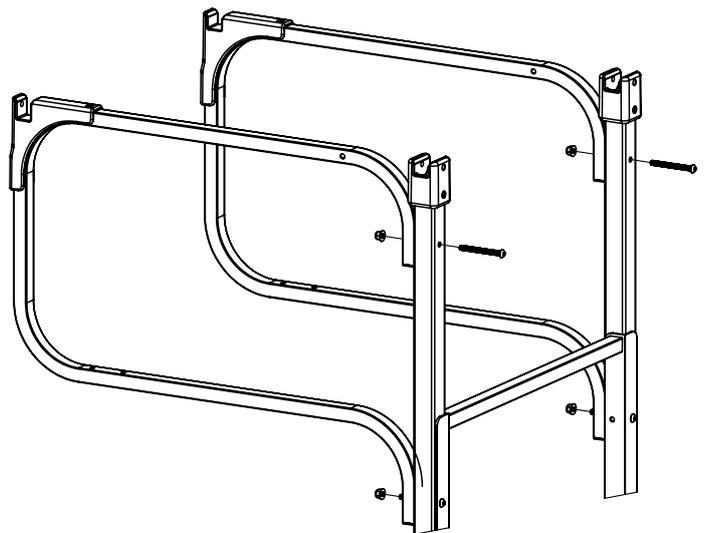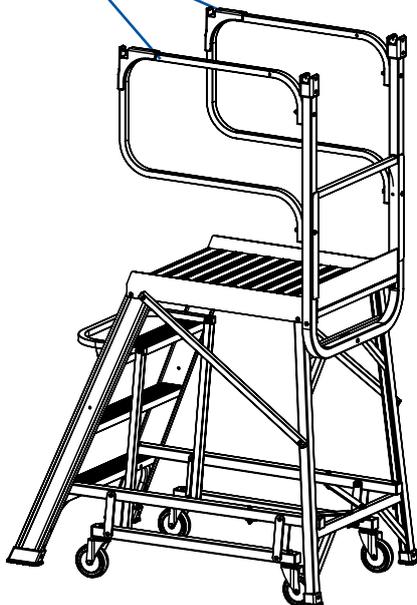

M8X80mm Screws (x2)



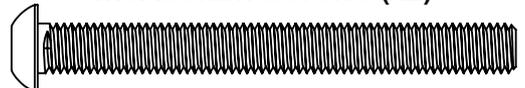


# BUILD METHOD


## Step 11 ►

Assemble Bottom Handrails to Top Handrails and Front Section


Bottom Handrails

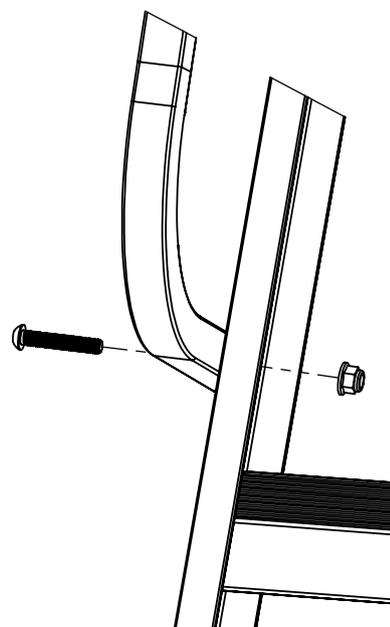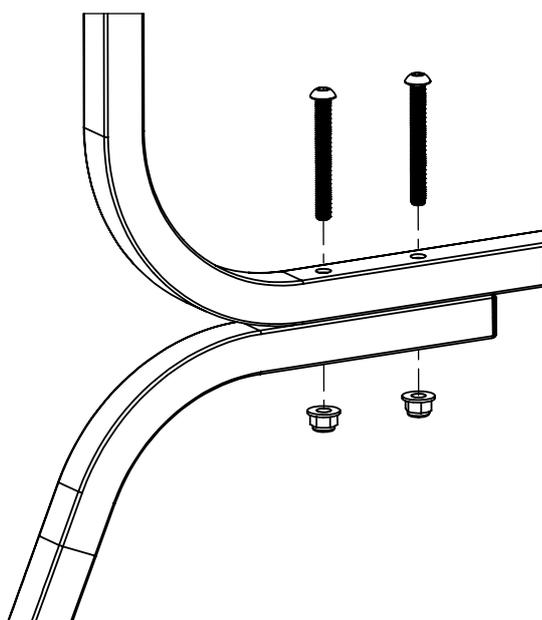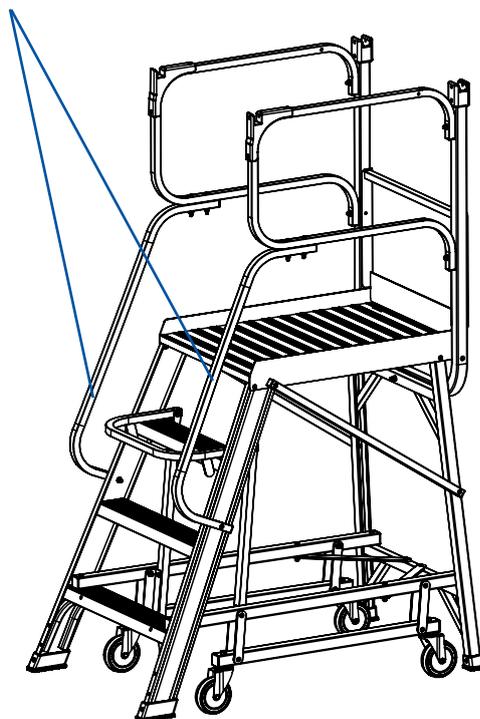

M8X70mm Screws (x4)

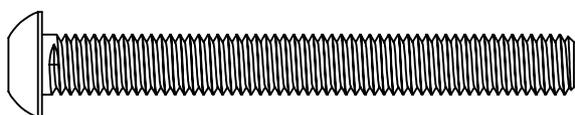

M8X45mm Screws (x2)


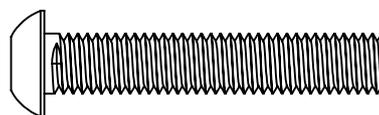


# BUILD METHOD


## Step 12 ▶

Assemble Front Safety Gate to Top Handrails

Front Safety Gate

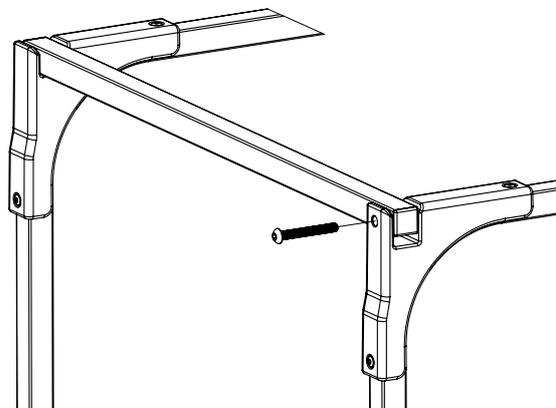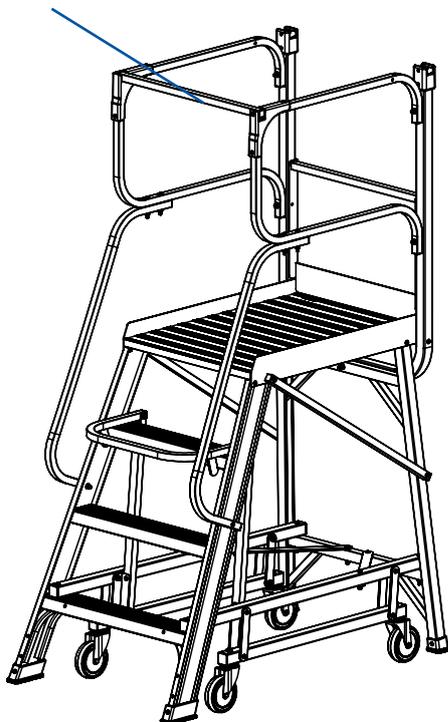



M8X60mm Screws (x1)

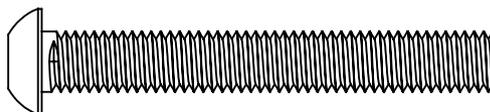


## Step 13 ▶

Assemble Rear Safety Gate to Rear Upright

Rear Safety Gate

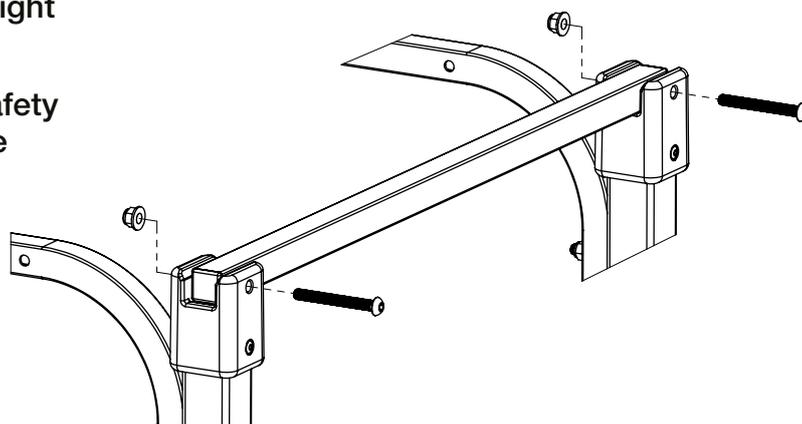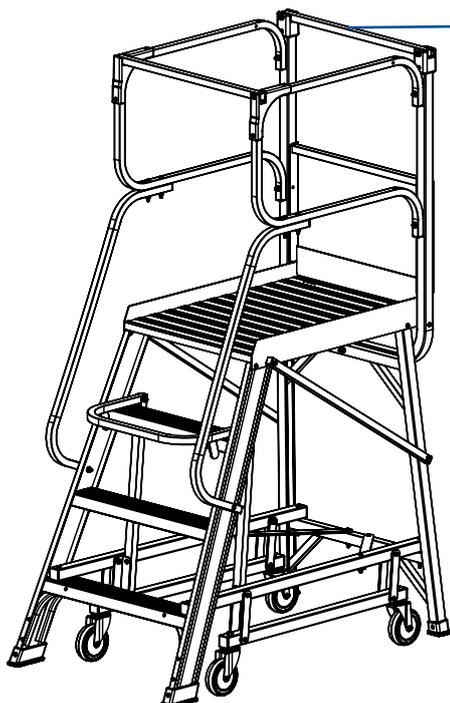

M8X70mm Screws (x2)

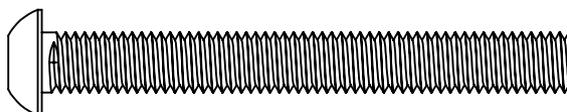


Insert only one (1) screw when assembling The Walk Thru' Configuration.

# BUILD METHOD

## Step 14 ▶

Assemble Shelf to Top Handrails (Shelf sold separately).

Skip this step when not assembling the Shelf Configuration.

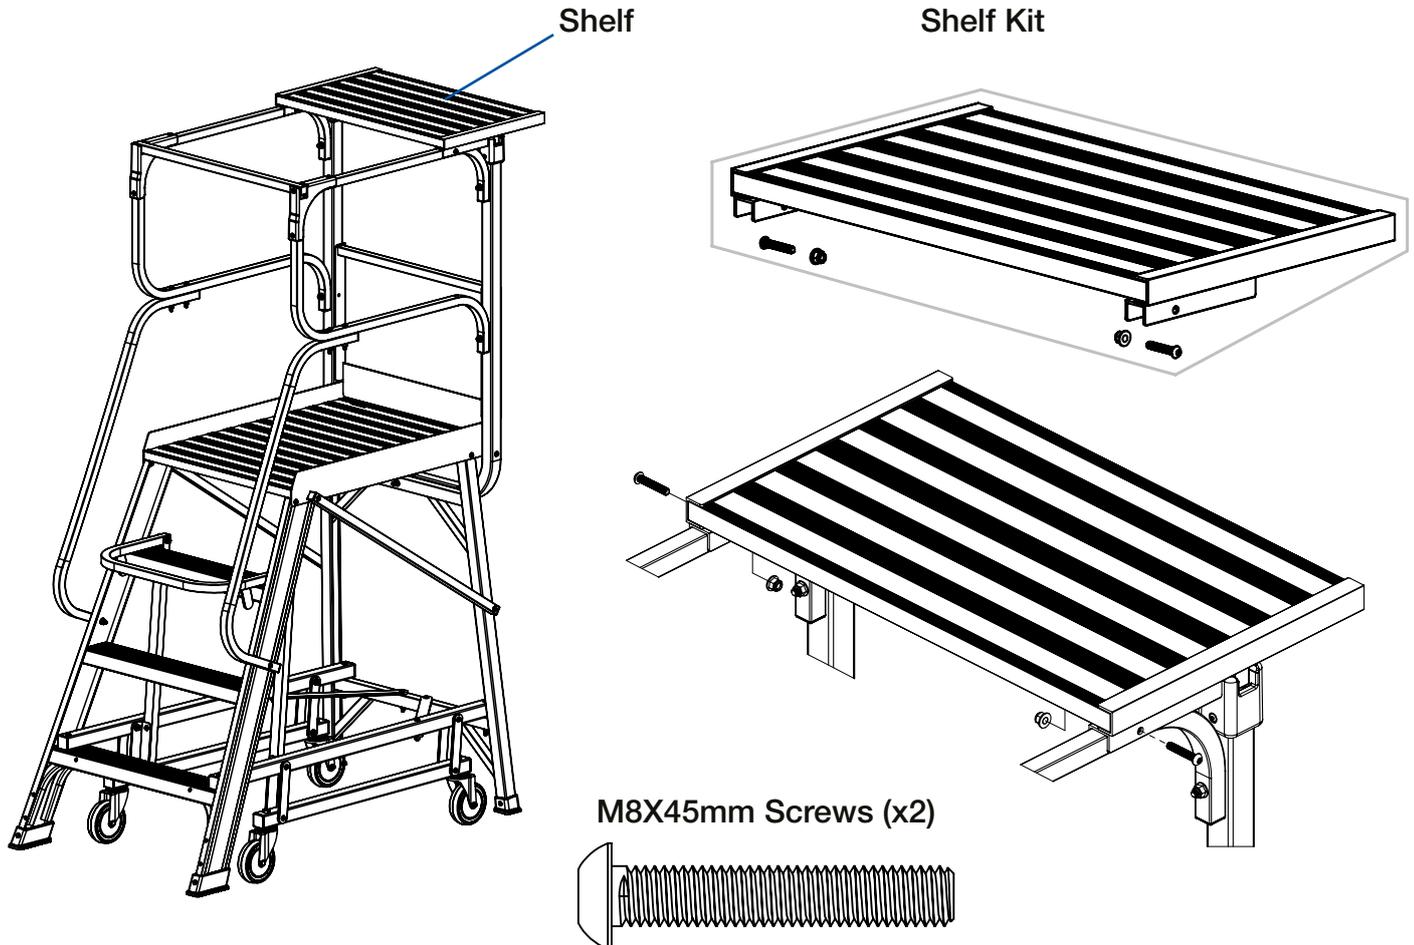

## Firmly tighten all fasteners assembled in Steps 6 to 14

Use the Bent Tube Spanner and Allen Key supplied in the Component Kit.  
Do not over-tighten Fasteners.





[www.wernerco.co.uk](http://www.wernerco.co.uk)