General Installation Guidance

Landscaped

Non - trafficked - pedestrian loading only








Driveway

Light - traffic/cars - 1.5 tonne wheel load - A15

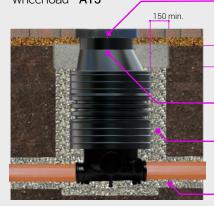

Square section access cover for block paved driveways Product Code - **450ACSRA**

Minimum 150mm deep formed concrete pad

600450RC - Reduction Cap from Ø600 shaft to accommodate 450ACSRA access cover


> - Minimum 150mm compacted backfill or granular bedding material

Granular Bedding material

Trafficked


Vehicles to 40 tonne wheel load - **D400**

Final installation of cover slab etc, should be agreed with the design engineer. Details of advised inspection chamber installations can be found in -DCG - Design & Construction Guidance and Section H of Building Regulations

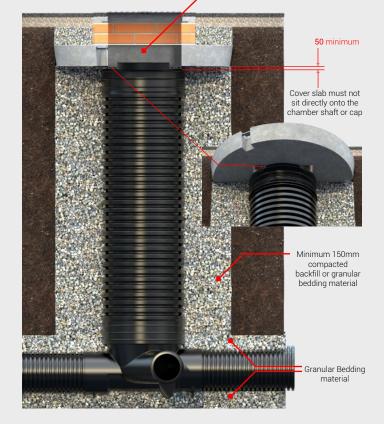

PCC Manhole

Using Accesso chamber base

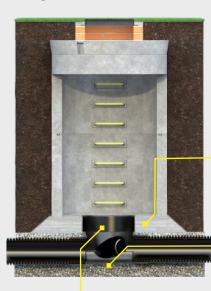



- Build concrete base up around chamber riser section and set concrete rings in place
- Alternatively, set concrete rings in place and then install concrete around base from inside chamber



Install base as normal, using granular backfill or bedding



Accesso chamber base Model shown AIC600300B, which accommodates 300mm twinwall