


# Weed Mat installation guide




Cladco Heavy Duty Weed Control Mat is a tough weed control solution that can be used under a decking area to prevent the penetration of weeds. This simple guide will help instruct you on how to effectively install Cladco Weed Mat.



Step 1. Clear away any plants, weeds, rocks, or other material that might be obstructing your site. Cut away the turf or the lawn by using an edger to cut the area and then a shovel to remove it. Make sure the ground is level.

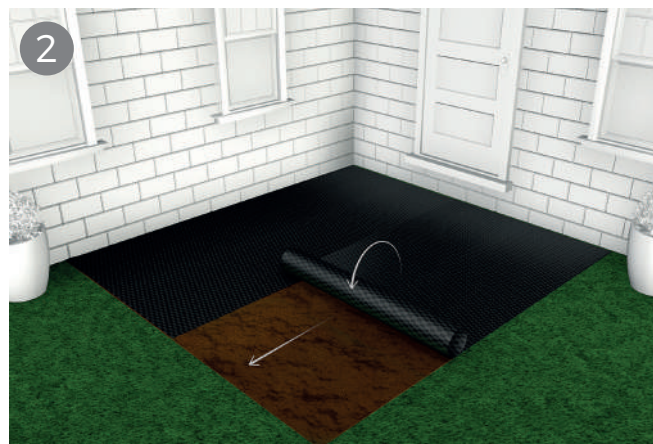

Step 2. Remove the turf until the ground is completely even. Cover the area of your site with a layer of weed control fabric to prevent any weed regrowth coming up under your decking. You may need to cut the weed mat to fit. You may want to pin your weed mat down at this stage.

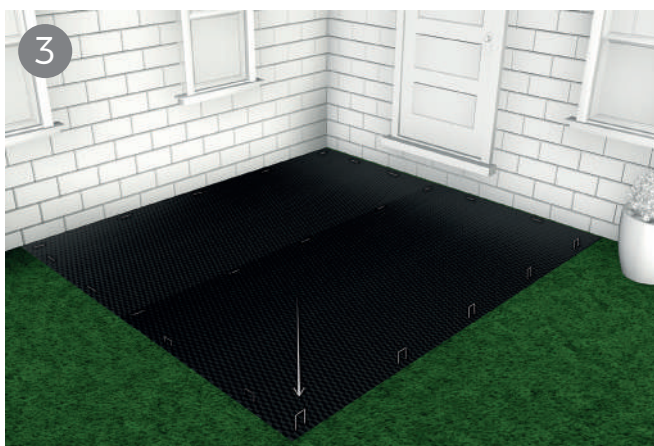

Step 3. Lay your Cladco Weed Mat on top of the prepared soil, if you need to overlap ensure you do this with enough coverage for weeds not to penetrate through. Cover the weed mat with your desired coverage such as chippings, bark or stones so none of the weed mat material is exposed.



Covering the material will elongate the lifespan of the fabric and should stop weeds in the area for years to come.



Order online at [www.wpc-decking.co.uk](http://www.wpc-decking.co.uk)  
Call us on 01837 659901

**CLADCO**  
PROFILES