


CORRAPOL<sup>®</sup>-BT

Durable Bitumen **Corrugated Sheet**  
Technical Guide

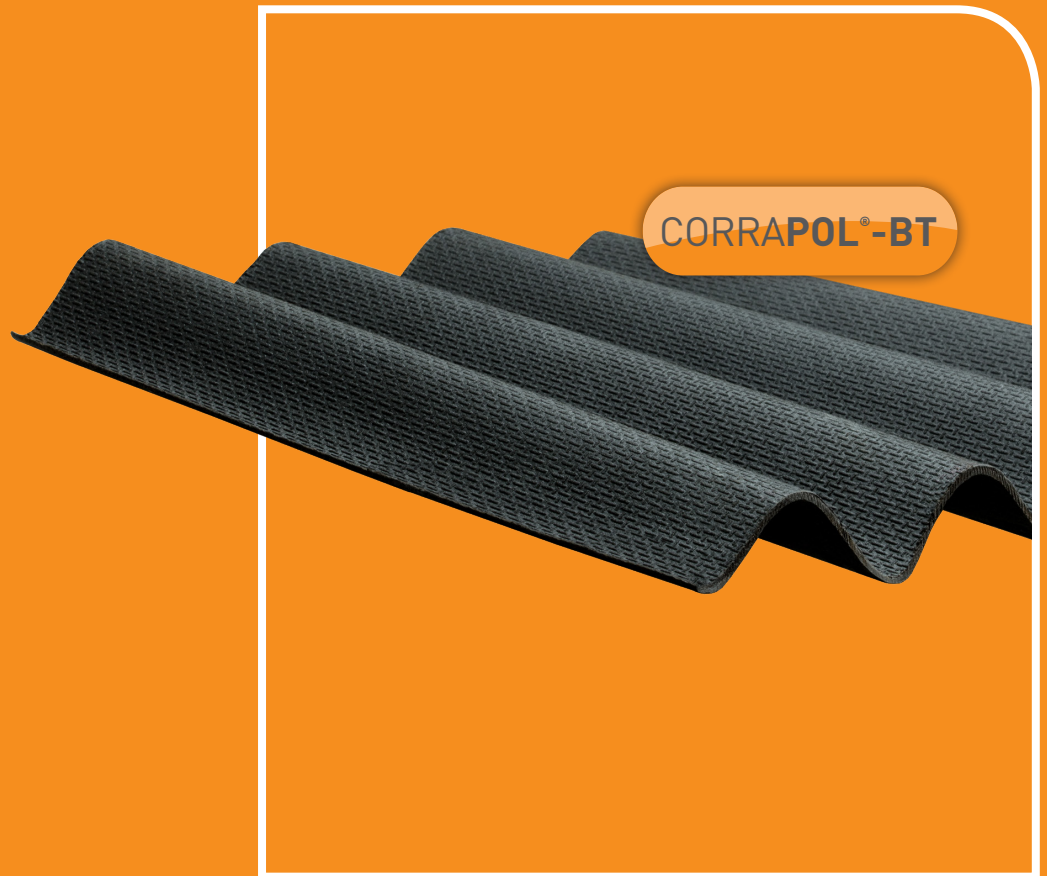

## Waterproof Roofing Sheet

CORRAPOL®-BT is a Corrugated Bitumen impregnated sheet designed for waterproof roofing of sheds, log stores, garages and other outbuildings.

Available in several colours CORRAPOL®-BT sheets provide a roofing solution to suit many applications. CORRAPOL®-BT sheets are lightweight, easy to cut and quick to install.


Samples of CORRAPOL® sheets are readily available for testing and specification purposes.

### Common uses:

- ✓ Sheds
- ✓ Garages
- ✓ Log Stores
- ✓ Children's Playhouses

### Qualities:

- ✓ Lightweight
- ✓ Easy to Cut to Size
- ✓ Simple Overlap Joints
- ✓ Fast to Install

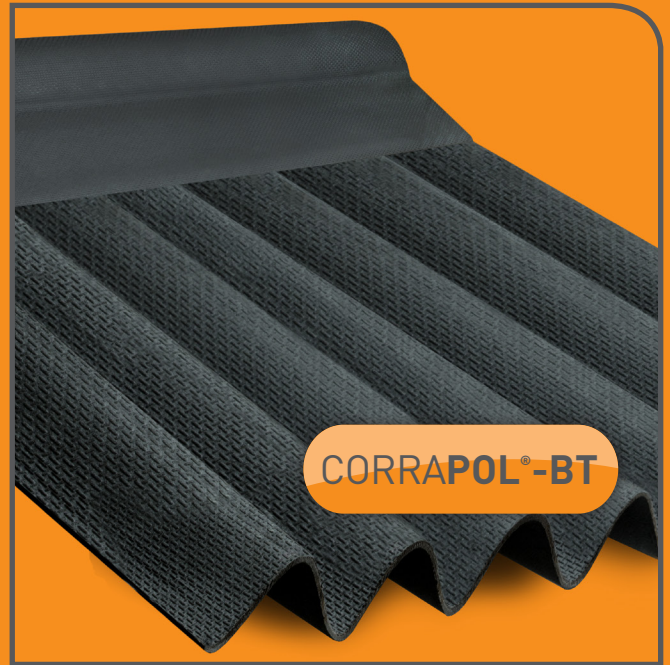

## CORRAPOL®-BT : Colour Options



## CORRAPOL®-BT : Installation Guide


|  |   |   |
|--|---|---|
| <p>Corrugated Bitumen Sheet: <b>2000 x 930mm</b></p> | <p>Corrugated Bitumen Roof Ridge: <b>1000 x 450mm</b></p> | <p>Foam eaves filler</p> <p>Plastic headed nails</p> <p>Screw cap fixings</p> |
|--|---|---|

### Tools required


|  |   |  |
|--|---|--|
| <p>Wear protective gloves and glasses.</p> | <p>Spray lubricating oil on a coarse toothed hand saw or use a power saw.</p> | <p>A hammer, cordless screwdriver tape measure and a straight edge tool.</p> |
|--|---|--|

## Installation


- 1** Take all **MEASUREMENTS** of the roof

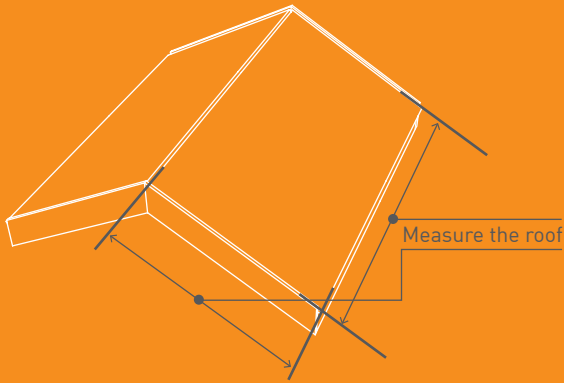


- 3** Install the **SECOND** CORRAPOL®-BT roofing sheet

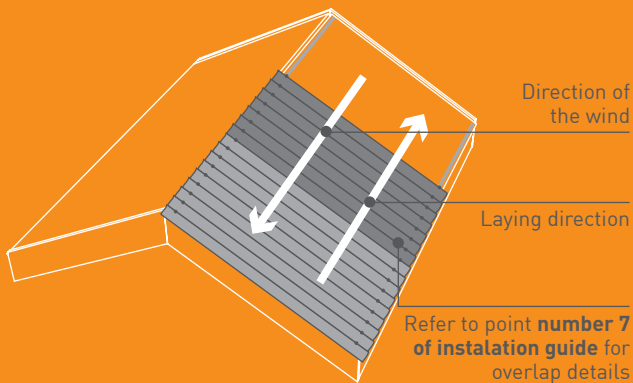

- 5** **FOLD** and **FIX ROOF VERGES** on all sides of the roof

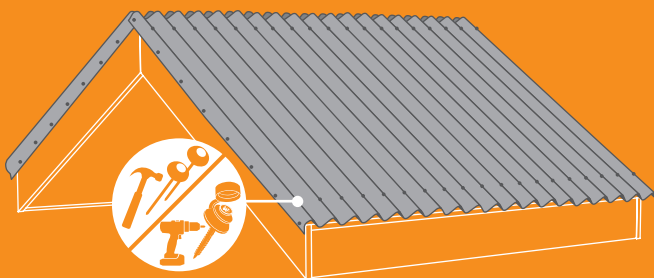


- 6** Install CORRAPOL®-BT **ROOF RIDGE** panels

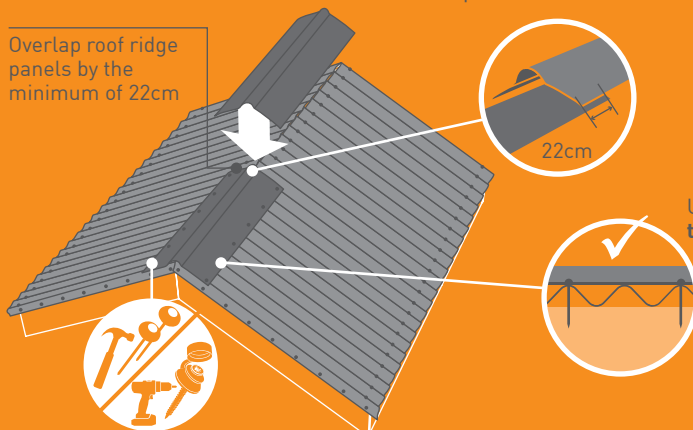


- 2** Install the **FIRST** CORRAPOL®-BT roofing sheet

**IMPORTANT** – To keep the roof watertight and weatherproof, install **CORRAPOL®-BT Eaves Fillers** along fixing points of the roof, making sure you **use either the plastic headed nails OR screw cap fixings** through the **corrugation peak** and not the trough.

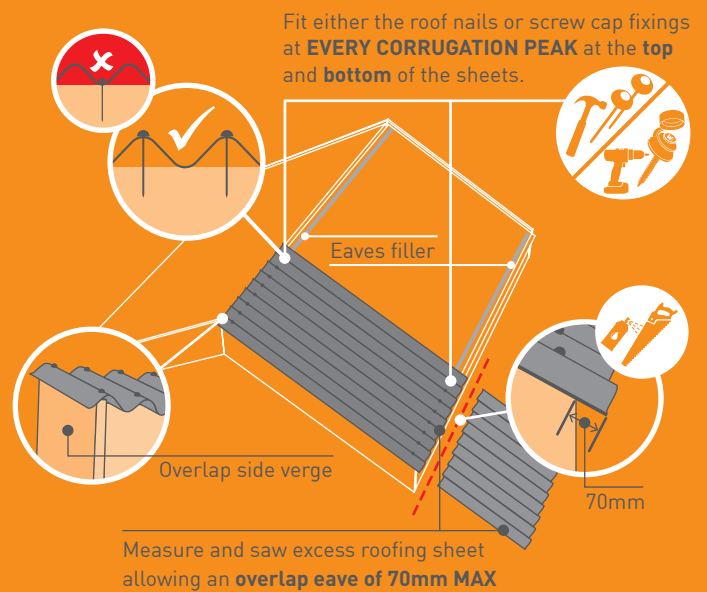

- 4** Install the **FINAL** CORRAPOL®-BT roofing sheet


**IMPORTANT** – To **avoid verticle cuts**, overlap the roofing sheets by **more than two corrugation peaks** to the **EXACT MATCH** of the roof dimensions.

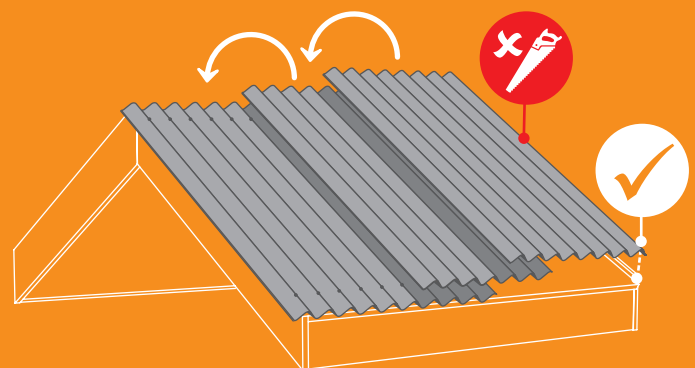

Use **nail** or **screw fixings** every **two corrugation peaks**



## 7 DETERMINE OVERLAPS for larger slopes

Fix intermediate roof supports every **two** corrugation peaks


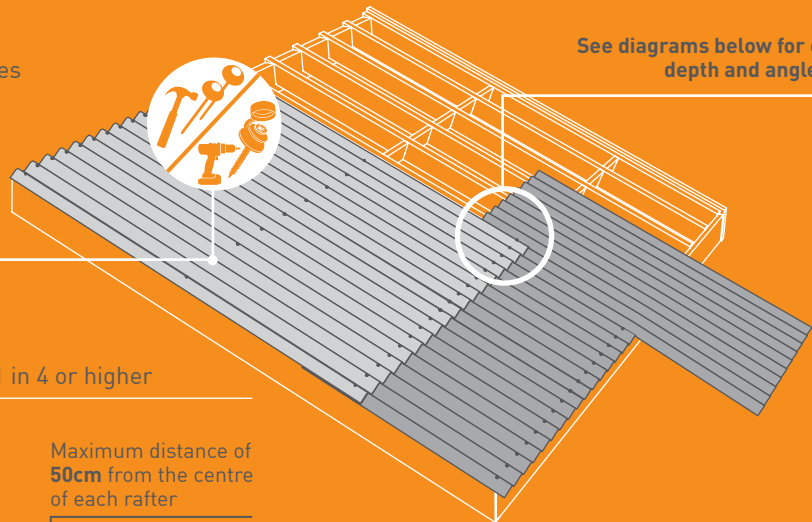


See diagrams below for overlap, depth and angle details

### Roof slopes of 15° or greater: Gradients of 1 in 4 or higher

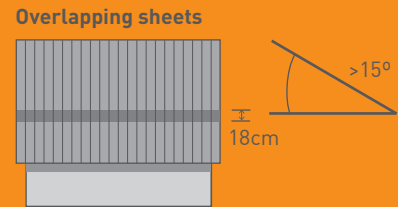
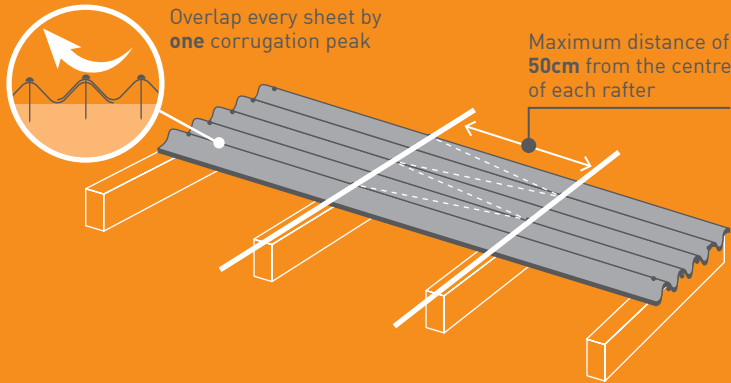


### Roof slopes of 10° – 15°: Gradients of 1 in 6 – 1 in 4

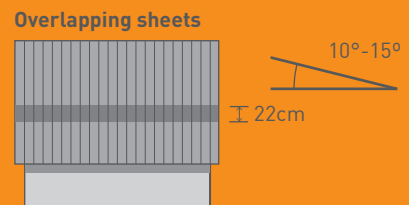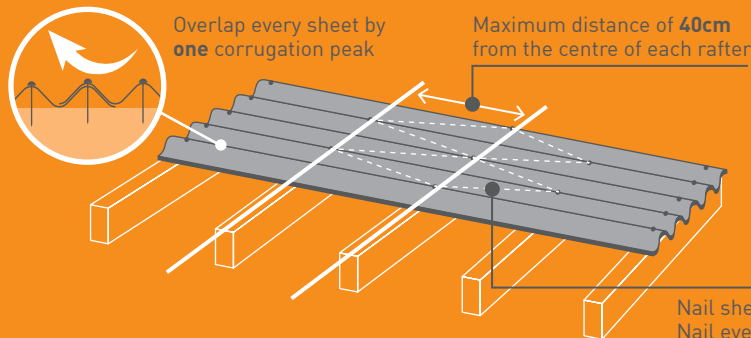

Nail sheets every corrugation at the eaves and sheet overlaps. Nail every other corrugation on intermediate purlins.

### Roof slopes of 5° – 10°: Gradients of 1 in 11 – 1 in 6

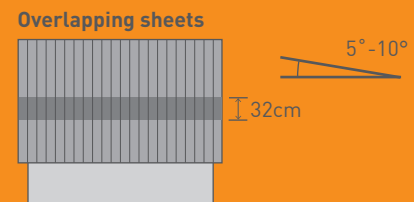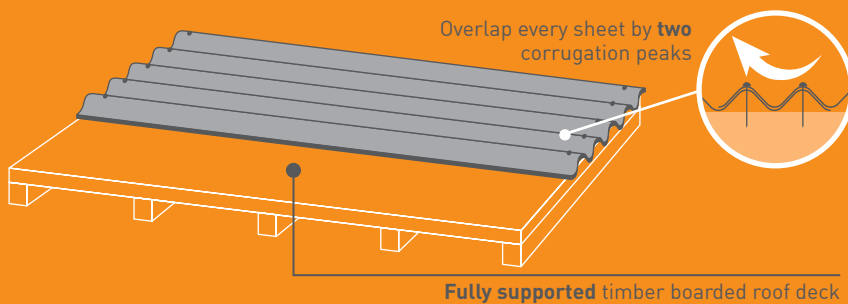

## WARNING : REGISTERED DESIGNS & PATENTS

The IP of the designs in this brochure are protected by internationally registered design rights. Many products are also protected with active or pending Patents. Clear Amber will not hesitate to take appropriate legal action if its rights in this respect are infringed.

© Copyright – Clear Amber Group Ltd – April 2019. No part of this publication may be copied, reproduced, scanned, or stored in any electronic database, whether in whole or in part, in any form or by any means, without permission in writing from Clear Amber. Clear Amber will not hesitate to take appropriate legal action if its rights in this respect are infringed.

Inasmuch as Clear Amber have no control over the circumstances in which our material may be used, or site specific parameters, we cannot guarantee that any particular results will be achieved. Users should carry out their own tests to determine the suitability of the material for their application.