


Dektite FlatSeal™ Installation Guide

1. Cut a neat hole through the felt layer and insert pipe. Use a nylon brush to remove all surface particles and spread with cold liquid bitumen.
2. Cut FlatSeal at appropriate trim line to suit pipe diameter with tin snips or scissors.
3. Wet pipe and slide FlatSeal down length. Press EPDM flange into cold liquid bitumen.
4. Adhere another layer of roof felt on top of the EPDM flange using cold liquid bitumen or self-adhesive bitumen membrane.
5. Press felt down firmly against EPDM flange and seal any gaps between the EPDM cone and the top layer of roof felt.

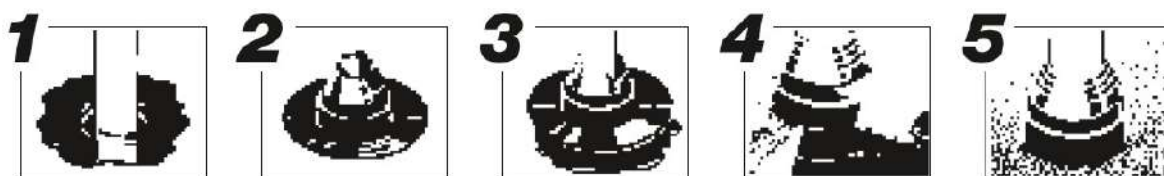

Dektite FlatSeal™ Butyl Installation Guide

1. Cut a neat hole through the felt layer and insert pipe. Use a nylon brush to remove all surface particles.
2. Cut FlatSeal at appropriate trim line to suit pipe diameter with tin snips or scissors.
3. Wet pipe and slide FlatSeal down length. Press self-adhesive flange onto roof surface.
4. Press felt down firmly against flange and seal any gaps between the cone and the roof material.