



Verge Detailing


Mechanically Fixed Verge (3.2 - 3.45 linear metres)

Coverage dependant on batten spacing


This product is not suitable for use with uneven wall surfaces or raked cut verges.

Installation Guide - Instruction Notes 1-6


- 1) Fix Battens and underlay in accordance with BS 5534. **Insert the Verge Units before fully fixing the battens into place.** Underlay should extend 10mm beyond the outer face of the gable structure. Battens must be cut inboard of the outer face of the gable structure by no more than 15mm (Picture 1).

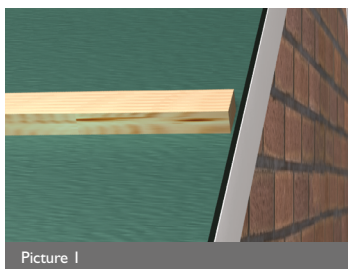


- 2) Take the eaves unit and locate the fixing tab onto the first tiling batten. Ensure that the drainage hole at the bottom of the unit discharges into the gutter (Picture 2). Fix to the tiling batten using 2 x 20mm nails. The tab on the underside of the unit must be fixed to the gable structure using an appropriate mechanical fixing method.

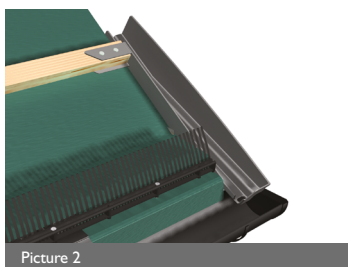

- 3) Fix a continuation unit to the second tiling batten and locate the clip over the top edge of the previously fixed unit (Picture 3). Nail to the tiling batten using 2 x 20mm nails. Repeat this on each course as necessary (Picture 4).

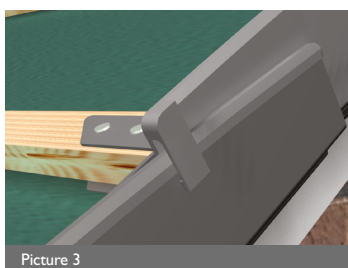


- 4) At the apex, the verge units may require mitre cutting to fit. The top foam filler should be bonded, using the adhesive strips, into the verge units either side of the ridge as shown (Picture 5).

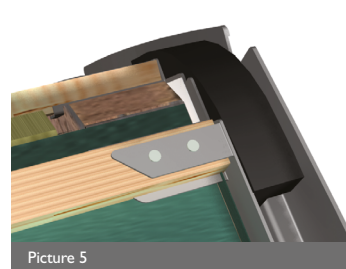


- 5) When tiling, all perimeter tiles must be twice mechanically fixed. Perimeter clips must be installed on each verge tile by nailing the clip through the tile nailhole when fixing the tile below (Picture 6).



- 6) At the top of the verge, install a Forticrete nailhole block end ridge tile to cover the apex detail. Secure in place using drive screws, washers and grommets (Picture 7).

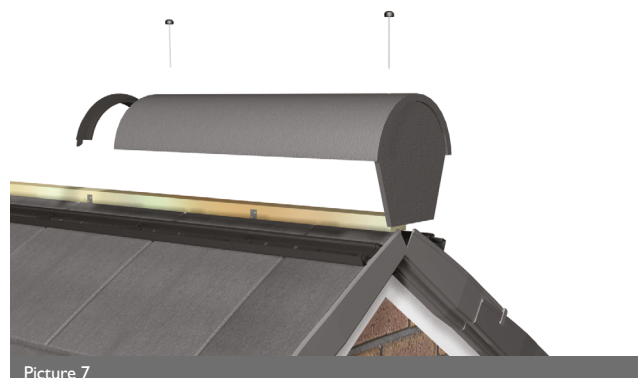

SL8 Mechanically Fixed Verge Components

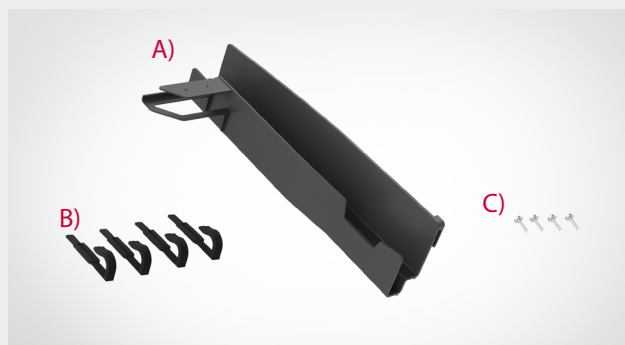

Verge Continuation Pack (3.2 - 3.45 linear metres)

Left Hand Pack Code - BUZ/7956/SLVL/--


Right Hand Pack Code - BUZ/7956/SLVR/--

A) 10 no. Verge Continuation Units (Handed)

B) 10 no. Perimeter Clips

C) 20 no. 20mm Nails

Colours: Grey, Rustic

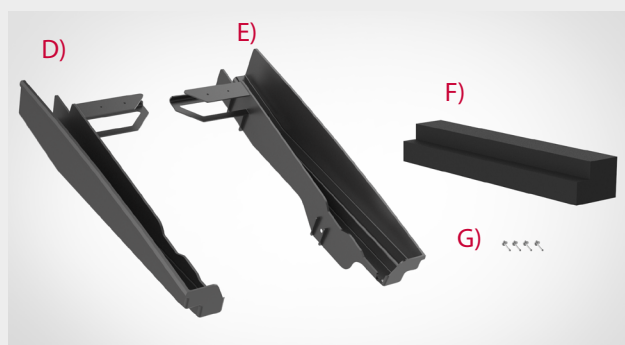

Verge Starter / Ridge End Pack

Pack Code - BUZ/7956/SLVS/--

D) 1 no. Starter Unit Left Hand

E) 1 no. Starter Unit Right Hand

F) 1 no. Top Foam Filler

G) 4 no. 20mm Nails

Colours: Grey, Rustic

Roofing Systems & Technical enquiries:

Forticrete Limited,
Boss Avenue, off Grovebury Road,
Leighton Buzzard, Beds LU7 4SD
Tel: 01525 244900
Fax: 01525 850432
E-mail: roofing@forticrete.com

Information on the complete range of Forticrete products can be found on the Internet at www.forticrete.co.uk

Forticrete, Gemini, Minislate, Centurion, Senator, V2, Hardrow Slates, Ecotile, Ecotile Plus and Ecoslate logo's are registered trademarks of Forticrete Ltd.

Components in this literature are registered in Europe under 003338326

The information contained within this publication is as accurate as possible at the time of going to press. However, this document does not form part of any contract and Forticrete cannot accept liability for any errors or omissions.

In order to maintain its position as a market leader, Forticrete operates a policy of continuous product development and therefore reserves the right to alter specifications without notice.

© Forticrete Ltd. 2018

