



Fig 1

A fully fitted roof window in its proper position.

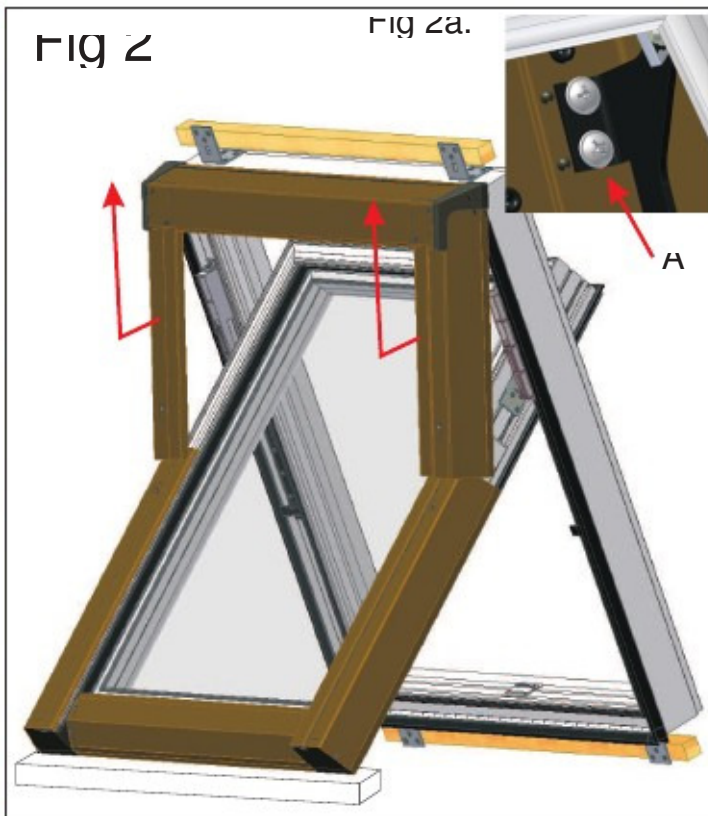


Fig 2.

Once the window has been taken out of the box place on some soft protective material such as foam. First open the window and looking from inside locate and unscrew the 2 wide head screws at either side of the frame near the top as in 2A. Pull the outer casing up until it detaches from the frame.



Fig 3.

After removing the upper casing partly unscrew the 2 grub screws holding the hinge onto the frame as in 3A on both sides. Once loose push the section up and out to remove the hinge from its locators, this may require a wooden or rubber mallet. Now you can remove the sash and place on some form of protective material.

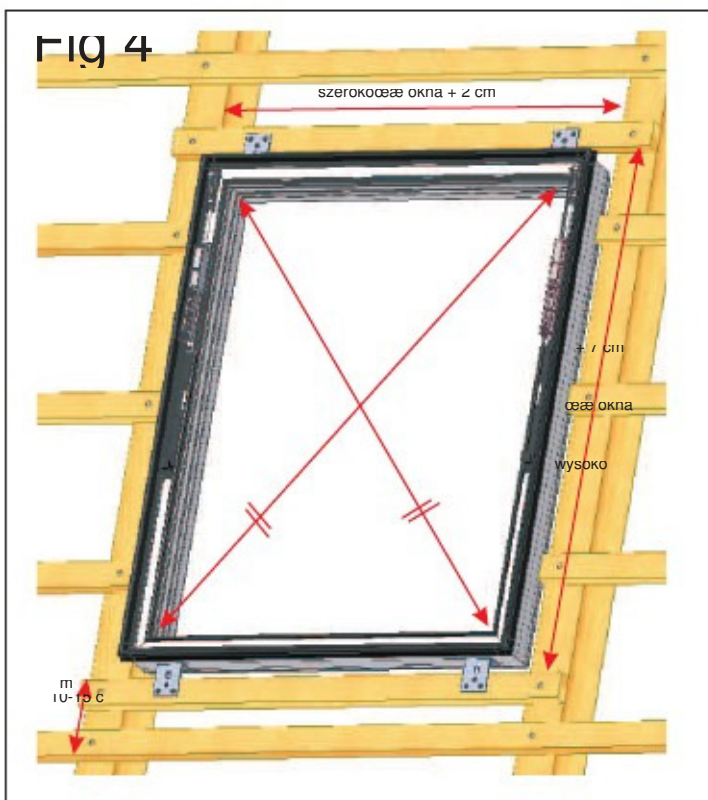


Fig 4.

Prepare the opening in the roof as Fig 4 and place battens top and bottom if not already there. Take off the transportation pieces of wood fixed to the brackets and fix the window to the battens with 3 screws per bracket taking care to keep the frame square when screwing down.

INSTRUCTIONS FOR INSTALLING
SKYLIGHT PREMIUM ROOF WINDOW

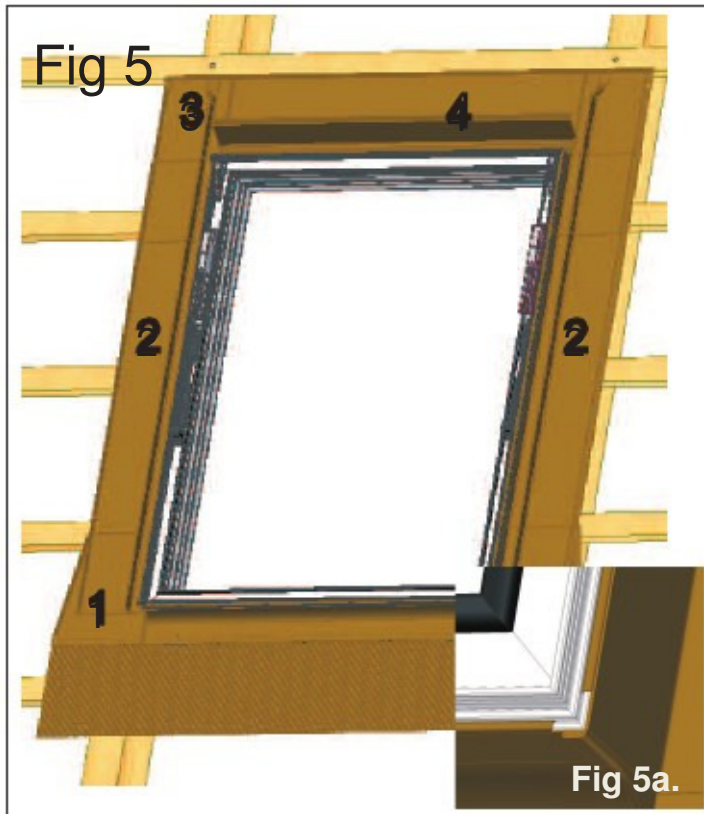


Fig. 5. Take off the thick rubber seal around the frame and place it on the ground so that you can remember which the top edge is. The flashings are started from the bottom up. Take the bottom section and push the small lip into the small groove in the bottom edge of the PVC frame. Take each side panel on a tiled flashing and again push the small lip into the groove of the frame. When fitting to a slate roof space out the soakers to suit.

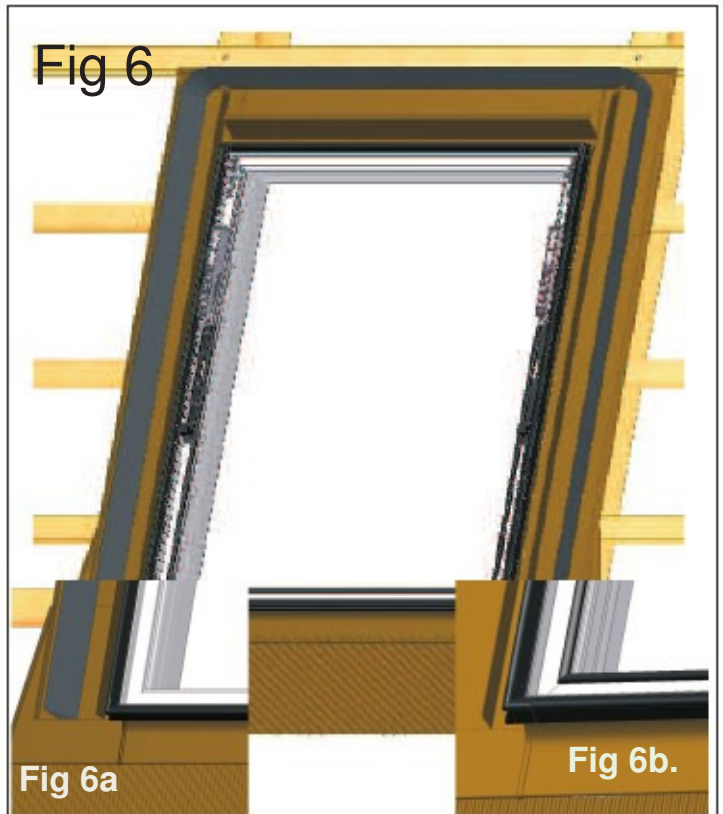


Fig. 6. After fitting the flashing put the rubber gasket back on the same way it came off, starting in the corners first and working back to the middle each time.

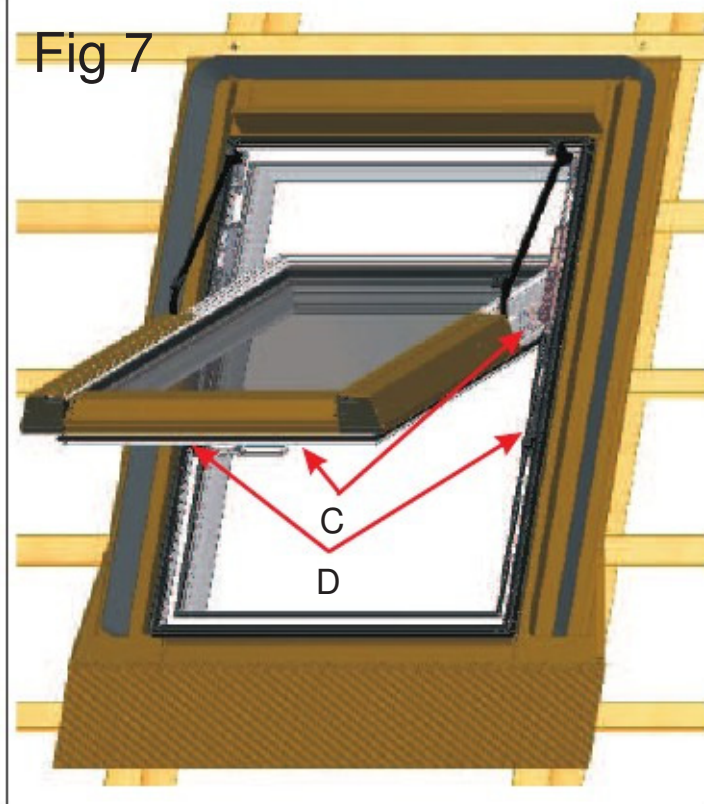


Fig 7.

Now refit the sash in the reverse order to section 3. Place the 2 rollers in there cups and re-attach the 2 brackets on the hinge at the top of the frame, tighten the screws.

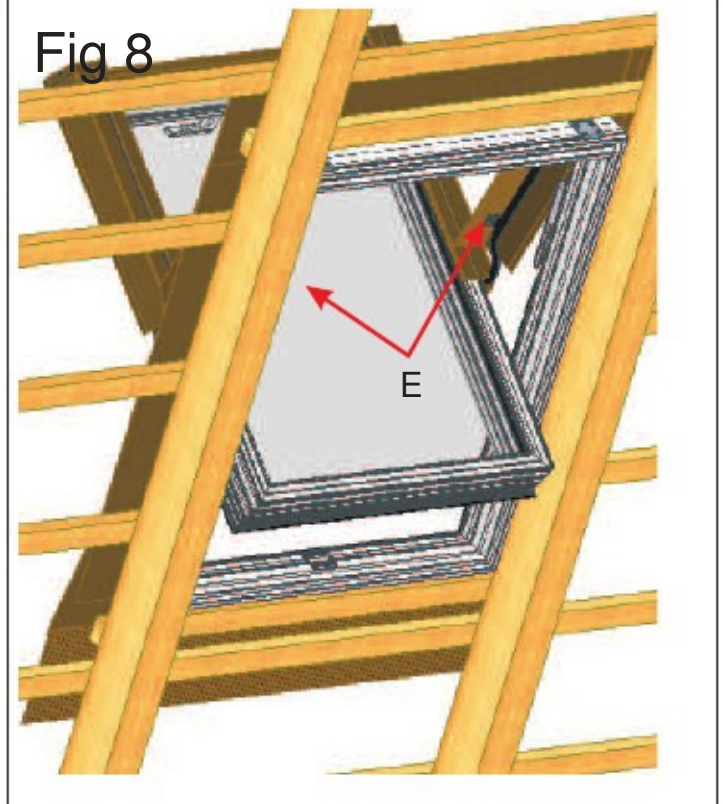


Fig 8.

Finally fit the outer casing back on to the frame with the 4 screws. There is double sided tape fixed around the frame of the window to allow the fitting of a breather membrane if required.

Finally...

Thank you for purchasing a Sola Skylights Product. We hope you will enjoy years of trouble free operation and routine minimal maintenance. Any issue or further guidance relating to this product, advice may be sought from our customer support Services on 01388778445, or alternatively visit our web site at www.solaskylights.com

Whilst every care has been taken to ensure that this product reaches you in satisfactory condition this does not affect your statutory consumer rights. We are confident that this product will perform to expectation and we look forward to being of assistance to you now or in the future.

Thank you for choosing Sola Skylights – Enjoy using your new Sola Skylights Product!

Sola SkyLights