

Dear Customer,

Vodichem wishes to thank you for purchasing our products.

This handbook has been designed to give you all the instructions for applying vodichem products correctly, for more information visit our website [www.vodichem.com](http://www.vodichem.com). Vodichem is a leading company in manufacturing liquid waterproofing systems specifically designed for the professional and DIY world. Vodichem has a wide range of products and we have full listings available on our website at [www.vodichem.com/products](http://www.vodichem.com/products)

**TECHNICAL ASSISTANCE:** For advice on a specific project, please call and request assistance. Or email images of the roof in questions for further advice to [technical@vodichem.com](mailto:technical@vodichem.com). We will need to know the dimensions, slope, desired color, edge conditions, and intended use of the roof.

**INSPECTING TRUCK SHIPMENTS:** Although we rarely have shipping damage, it is essential that you inspect all truck shipments thoroughly before signing the freight bill, note any damage on the freight bill, and call us within one business day to report the damage. If you follow this procedure, we will guarantee free replacement materials. If you fail to note damage before accepting a truck shipment, you may be denied this protection, so insist on taking the time for a thorough inspection.

Kind Regards  
VODICHEM


## INTRODUCTION

Vodichem products have been designed to permanently waterproof most new or existing roofs with positive drainage, including roofs with low slopes and complicated flashings.

The system consists of three principal components:

- **VODIPREN 100** a highly elastic waterproofing bituminous membrane containing solvent;
- **VODITES** a reinforcing fabric;
- **VODICOLOR TOP** a liquid coloured membrane based on synthetic resins which are modified in order to obtain an absolutely waterproof and elastic layer, but above all, a film which is resistant to the prolonged contact with stagnating water.


**STEP 1** CLEAN THE SURFACE VERY WELL by SWEEPING, SCRUBING OR VACUUMING IT

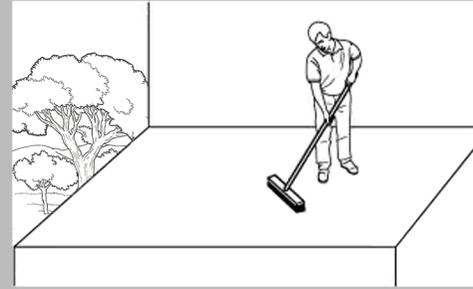


**STEP 2** MIX THE VODICHEM 100 IN ITS CAN FOR FEW MINUTES (please note it is essential to wear protective gloves at all times when using our products)




**STEP 3** USING A SHORT ROLLER, APPLY A COAT OF VODIPREN 100 AT LEAST 4" UP THE WALL AND 4" ONTO THE ADJACENT ROOF SURFACE, CUT A STRIP OF VODITES AND EMBED IT INTO THE WET VODIPREN 100, MAKE SURE THAT IT IS EXTENDED AT LEAST 3" UP THE WALL AND 3" ONTO THE ROOF SURFACE

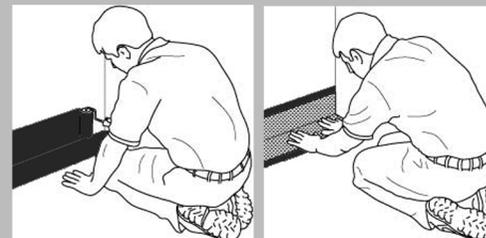

**STEP 4** APPLY VODIPREN 100 ONTO THE ROOF SURFACE

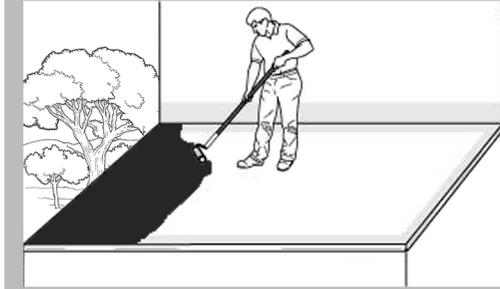

**STEP 5** UNROLL VODITES INTO THE WET VODIPREN 100, MAKING SURE THERE ARE NO FOLDS OR WRINKLES. AFTER YOU HAVE APPLIED VODIPREN 100 TO THE WHOLE SURFACE, EMBED THE FABRIC INTO THE WET VODIPREN 100 OVERLAPPING EACH LINE OF FABRIC SECTION BY 3" OR 4"

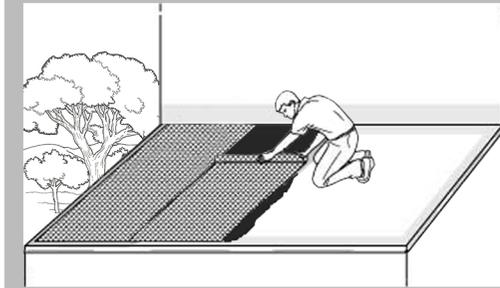

**STEP 6** WAIT ONE OR TWO DAYS AND APPLY THE SECOND COAT OF VODIPREN 100 TO THE VODITES, CAREFULLY COVERING THE WHOLE SURFACE

**STEP 7** WHEN THE VODIPREN 100 HAS FULLY DRIED (15 DAYS) YOU CAN APPLY VODICOLOR TOP USING A ROLLER OR BRUSH

