



— Installation details and cutting templates —



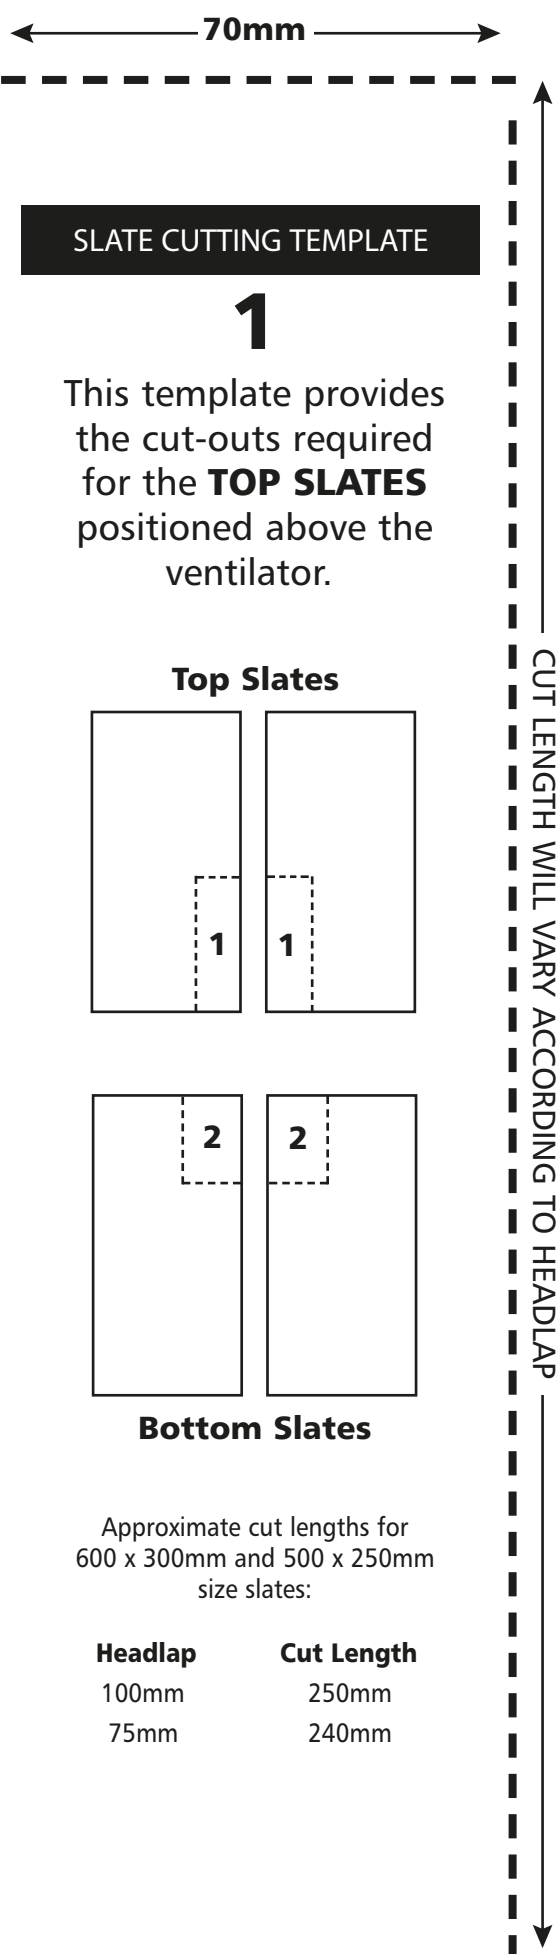

— Installation details and cutting templates —

Fixing instructions

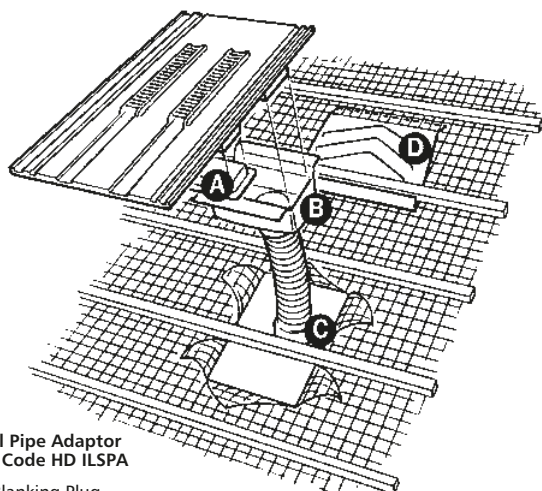

Soil Pipe Adaptor
Kit Code HD ILSPA

A Blanking Plug

B Vent Adaptor

C 100mm Flexible Hose

D Optional Extra -
Moisture Diversion Plate
Code IL/DP

Fitted flush with the slates at 2 m centres, the ventilator will provide an equivalent airflow to a continuous 5 mm high level gap, and should be fitted in conjunction with the appropriate Hambleside Danelaw eaves ventilation products. As an alternative to an eaves ventilation system the vents should be fitted at 1 m centres to achieve the equivalent of the requirement for a 10 mm continuous gap at eaves level.

Underlay Preparation

The unique twin venting spigots require two rectangular apertures to be cut into the roof underlay. This should be carried out in accordance with the illustration overleaf, in order to deflect and prevent water and debris penetration through the underlay, thus maintaining the integrity of the roof underlay.

Sark Board Fixing

When fitting flush fit slate vents to roof constructions that utilise sarking boards, the surrounding slates should be trimmed as per the instructions overleaf. The underlay should be cut to form a 205mm wide x 290mm deep opening by cutting the diagonals of the rectangle. The triangular flaps of the underlay are then folded back and tacked to the sarking to help maintain the integrity of the roof.

The sarking board below is then cut out to match the aperture in the underlay to enable the spigots on the vent to pass through into the roof void. Care must be taken at this stage to trim the opening neatly and accurately to fit the vent spigots and not create excess space around them, which may impair the integrity of the roof cover. The vent may now be fitted and the other slates trimmed around.


Soil ventilation and mechanical extraction

When using the vent for either soil ventilation or mechanical extraction it is advisable to first of all fit the adapter kit, and the blanking plug to the smaller of the two spigots to prevent back-venting. Both vent spigots should be left open if ventilation only is required.

For further advice on the fitting of this product, or any other technical information please contact us at, Hambleside Danelaw Ltd, Long March, Daventry, Northamptonshire NN11 4NR.

T: 01327 701900

E: techhelp@hambleside-danelaw.co.uk

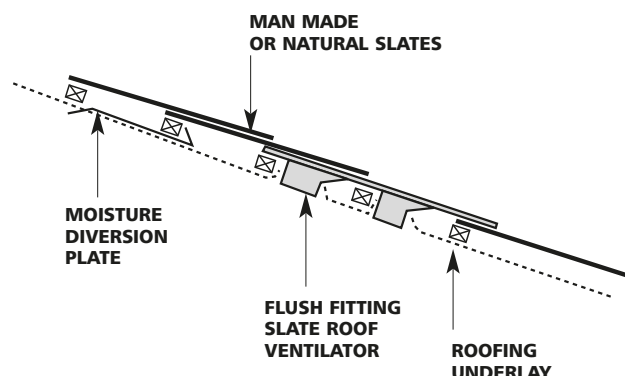


Flush Fitting Ventilator to suit two slate sizes:-

600mm x 300mm Code HD ILSRV10/24

500mm x 250mm Code HD ILSRV10/20

Slate configuration for HD ILSRV10/20


Ventilator size 565 x 290mm

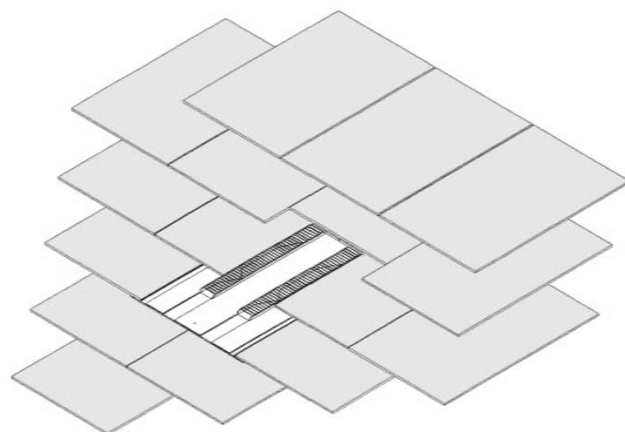

Adjacent slates overlap vent outer flanges

Slate configuration for HD ILSRV10/24

Ventilator size 615 x 300mm

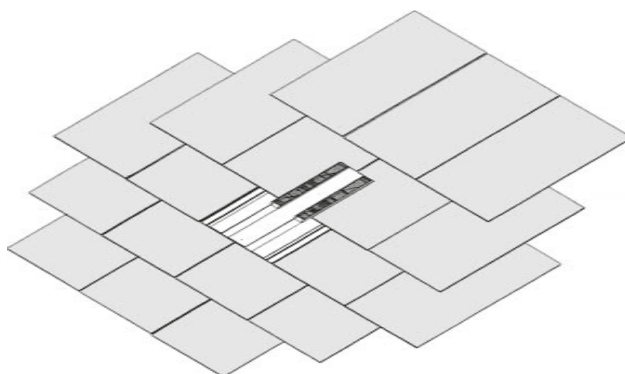

Adjacent slates abut ventilator