INSTALLATION GUIDE

Kytun™

ALUVERGE®

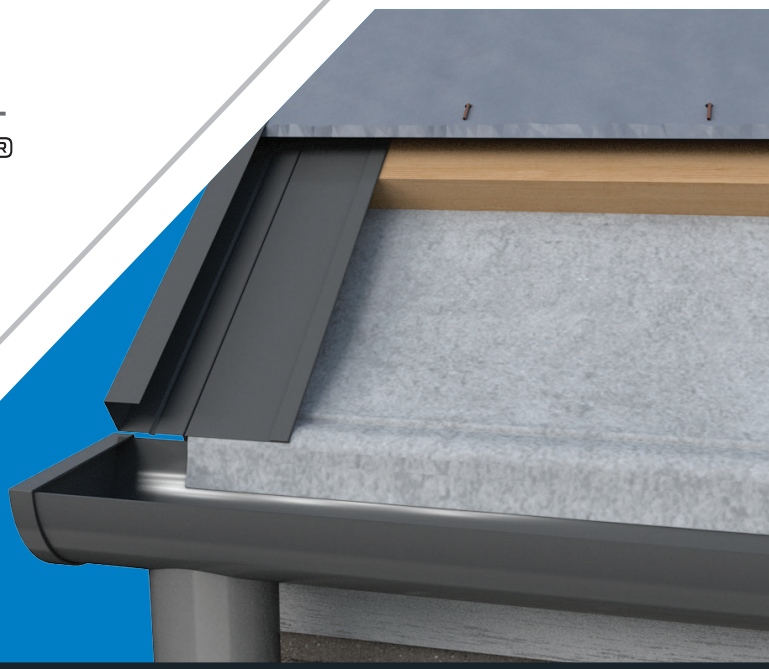

SLATE DRY VERGE

ALUMINIUM - TYPE 1

SLATE DRY VERGE (T1)

INSTALLATION FOR STANDARD VERGE

BARGEBOARDS & BRICKWORK

1. Underlay and battens should be laid and cut flush with outer edge of gable wall or bargeboard.

2. Position the verge trim on top of the battens.

3. Position the first length to overhang at the eaves into the gutter, by the required amount (Fig.1).

4. Nail the horizontal flange of the trim to each batten using a 40mm long galvanised clout nail ensuring the batten ends are nailed to the substructure.

5. When joining adjacent lengths of verge trim, ensure the lower length of trim is nailed securely to each batten (joints at the centre of a batten) (Fig.2).

6. Trim the inside corner of the trim. Make a small triangular cut into the top lap of the trim and press down slightly (Fig.3). This will allow the upper length to push inside the lower length.

Fig.1. Nail each length of trim to batten.

Fig.2. Join at the centre of the batten.

SLATE DRY VERGE (T1)

INSTALLATION FOR STANDARD VERGE

7. Slide the verge slates under the lip of the verge Trim and nail in accordance with the recommended fixing specification. (Fig.4)

Please note that sheet metal cutters should always be used to cut the trim. Use protective gloves when handling to avoid injury from sharp edges.

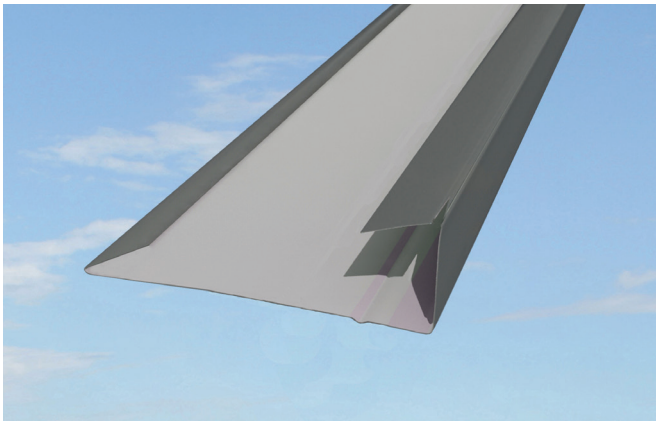

Fig.3. Make a small triangular cut.

Fig.4. Insert upslope trim into lower trim section.

SLATE DRY VERGE (T1)

INSTALLATION FOR STANDARD VERGE

RIDGE APEX

1. Prior to fixing, offer the left hand trim up to the apex of the ridge and plumb cut the depth of the trim to the desired angle dependent on the pitch of the roof (Fig. 6).

2. Nail the left hand trim into place.

3. Repeat instruction 1. with right hand trim and butt together.

Please note that sheet metal cutters should always be used to cut the trim. Use protective gloves when handling to avoid injury from sharp edges.

NWA GROUP

U.K. Office: Brook Hse, Stock Lane,
Halifax, W. Yorkshire, HX2 7RU.
T. +44 (0)1684 293702
E. info@kytun.com W. www.kytun.com