

Green Lane, Wardle Nr. Nantwich, Cheshire, CW5 6BN

www.rowgar.co.uk

Help Line: (Normal Office Hours) 01829 261 121

Email: support@rowgar.co.uk

Trentvale 5x3 Pent Metal Shed

ASSEMBLY INSTRUCTIONS

Ligth Grey: SS543A

Dark Grey: SS544A



JOY-A

Requires two people and takes 2-3 hours for Installation.

Assembly Preparation

Owner's Manual

Please check local building codes regarding footings, location and other requirements before beginning construction.

Assembly instructions:

Reviewing all instructions and the appropriate information before you begin, make sure following the step sequence carefully for successful results.

Flooring base:

A good location for the storage building is a square and level area with good drainage. The base is not included in the kit which may need purchase separately or may construct a foundation and anchoring system of your own.

A strong plastic sheet (thickness: at least 150µm) should be placed under the foundation to assist in reducing rising dampness from the soil, thus reducing condensation build up in the shed. Your storage building must be anchored to prevent wind damage. Once secured, it is highly recommended applying silicone along the inside of the base rail to minimize condensation.


Parts and Parts List:

Before you start, separate and identify all the parts and hardware to be sure that you have all the necessary parts for your building (refer to the Parts List Page).

If you find that a part is missing, please notify the seller within one week after receiving the product. Do not attempt to assemble the building if parts are missing because any building left partially assembled may be seriously damaged by light winds.

Tools you need:

(Please tear off the safety protection layer before the assembly, keep the part number label if needed)



Safety must be put in the No. 1 position:

- 1. Select a dry and calm day for your assembly. Team works (Two or more people) are required during the assembly. It is also recommended to finish the assembly in a day to avoid damage to the product or missing of some small parts.
- 2. Wearing safety gloves, eye protection and long sleeves during the assembly to prevent injury. Pay attention to the sharp edge of some parts.
- 3. Children and pets are not allowed entering into the construction site.
- 4. Never concentrate your total weight on the roof of the building. When using a step ladder make sure that it is safe.

Care & Maintenance:

- 1. Keep the shed clean with soft cloth, use water if necessary.
- 2. Keep the door tracks clear of dirt and other stuff that prevent them from sliding easily.
- 3. Clean the snow with necessary tools to make sure it is safe to enter into.
- 4. The shed is not made for living but storing stuff.
- 5. Please add some oil on the top and bottom door sliding channel to make door slides smoothly.


Screwdrivers:

Caution: Power screwdrivers can easily over tighten the screws resulting in splitting the washer and/or stripping the thread of the hole. This can lead to water leaks and inadequately fixed panels. While a power screwdriver can be used to start the screws off, the final few turns and tightening of the screws MUST be done using a hand screwdriver.


Condensation:

Condensation can form on the inside of any building made of any material. On metal sheds it can sometimes be more obvious. Condensation is the result of warm moist air coming into contact with a cold surface. To minimise the risk of condensation build up; site the shed on a good well drained base that contains a damp proof barrier to prevent moisture rising up through the floor. Ensure any standing water is diverted away from the base of the shed. Make sure there is good air flow through the building, particularly if it's to be left closed up for long periods of time. Do not block any gaps or vents. Leave a gap between the walls and stored items. If needed, Insulating the inside of the roof may also help reduce sudden changes in temperature further reducing condensation build up.


Size of Joy-A:

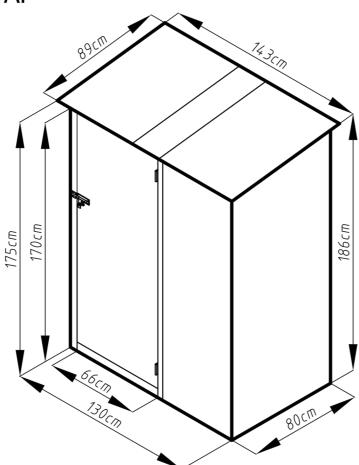

Area of installation requirement:

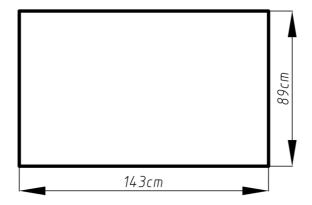

Joy-A:

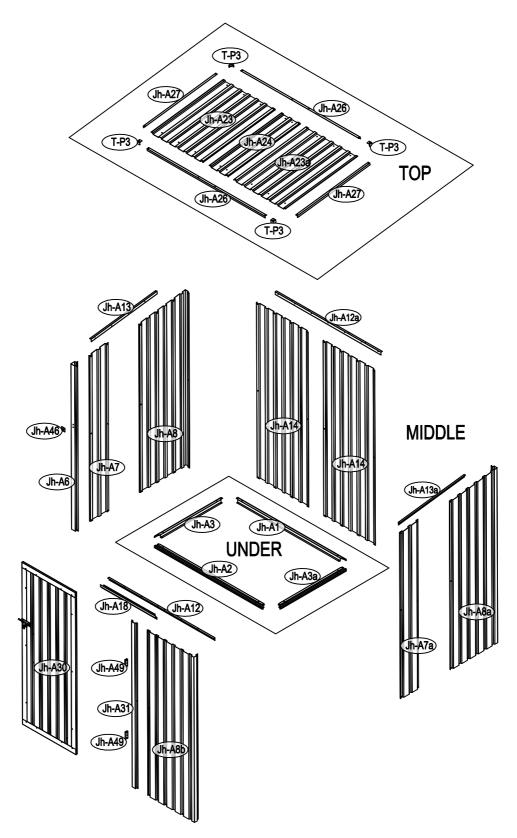

NO.	IMAGE	mm	QTY	NO.	IMAGE	mm	QTY
UNDER				ANNEX			
Jh-A1	. ,-Ղ	1303	x1	T-P3	Ŕ		х4
Jh-A2		1303	x1	Jh-A40	0		x82
Jh-A3		803	x1	Jh-A41	♥	ST4x10	x85
Jh-A3a		803	x1	Jh-A42	™	ST4x16	x14
MIDDLE				Jh-A43	Opp 60	M4x10	x32
Jh-A6	긘	1724	x1	Jh-A44	8		x44
Jh-A7		1755.5	x 1				
Jh-A7a		1755.5	x1				
Jh-A8		1824	x 1				
Jh-A8a		1824	x1				
Jh-A8b		1723	x1				
Jh-A14		1824	x2				
Jh-A12	Γ	1270	x1				
Jh-A12a	Γ	1270	x1				
Jh-A13	Γ	802	x1				
Jh-A13a		802	x1				
Jh-A18	4	660	x1				
Jh-A31		1723	x1				
TOP							
Jh-A23		880	x 1				
Jh-A23a	~~~~	880	x1				
Jh-A24		880	x1				
Jh-A26		1417	x2				
Jh-A27		880	x2				
DOOR							
Jh-A30	~~~~~	1688	x1				
Jh-A32	3	1000	x2				
Jh-A36	Л	1688	x1				
Jh-A37		1688	x1				
Jh-A38		640	x2				
Jh-A46	Ģ		x1				
Jh-A47	0 0		x1				
Jh-A48	••		x1				
Jh-A49	0 0 0		x2				

