
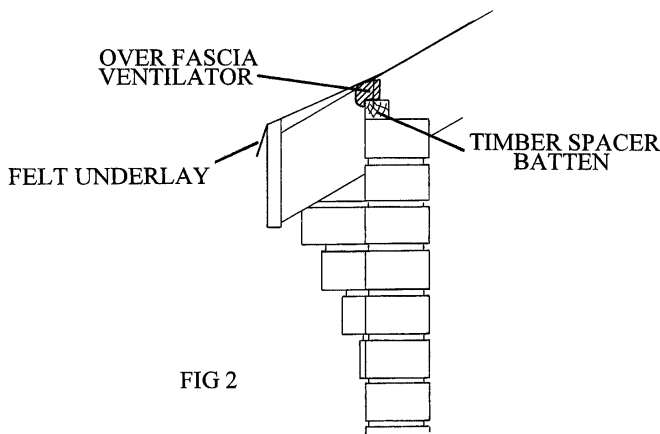
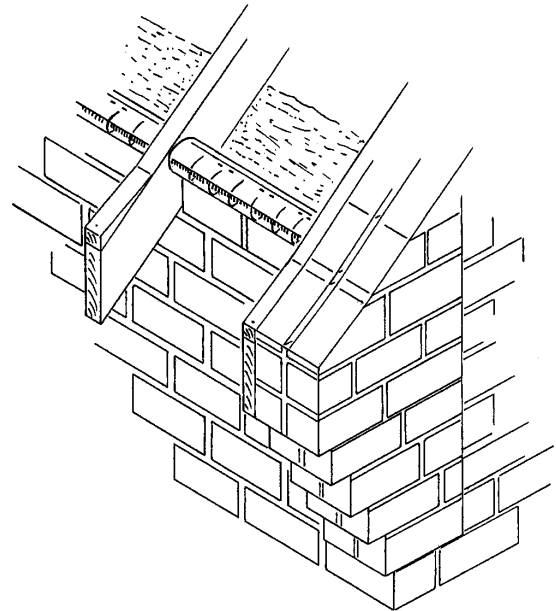


GENERAL FITTING FOR OVER FASCIA VENTILATORS FITTED IN A CORBEL BRICK SITUATION

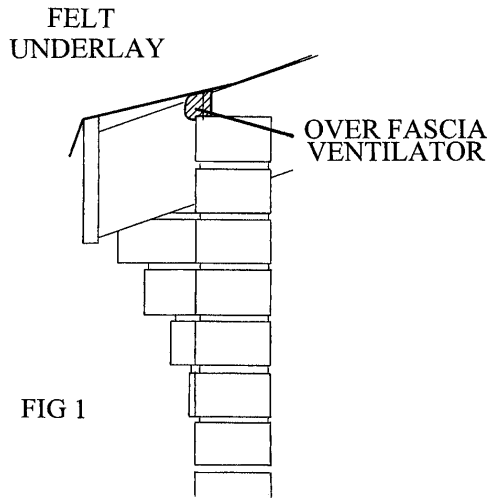

Description:

The G1200N and G2500N Over Fascia Ventilators can be fitted to the top of the brickwork when used in a corbel brickwork situation to provide 10mm²/M or 25mm²/M of airflow into the roof space.

Note: - For More Detailed Information See Product Information Sheets: -

G1200N OVER FASCIA VENTILATOR - MBP 8010
G2500N OVER FASCIA VENTILATOR - MBP 8011

Fitting Instructions:

The Over Fascia Ventilators (A) can be fixed in two ways.

- 1) Nailed directly to the brickwork by using masonry nails through the fixing holes provided and fitted tight up to the felt see (figure 1).
- 2) Fixed to a timber spacer batten fitted to the brickwork to push the Over Fascia Ventilator tight up against the felt see (figure 2).

Both over fascia ventilators can be easily cut to length using a fine toothed saw.

This product should be used in conjunction with other Manthorpe products to provide a complete roof ventilation system.

MANTHORPE BUILDING PRODUCTS LTD
MANTHORPE HOUSE
BRITAIN DRIVE
CODNOR GATE BUSINESS PARK
RIPLEY
DERBYSHIRE DE5 3ND

TEL: 01773 514 200
FAX: 01773 514 262
EMAIL:
sales@manthorpe.co.uk
WEB:
www.manthorpe.co.uk

DRN M.A

Date 01.08.03

DRG No

Issue

The company maintains a policy of continuous development of its product range and reserves the right to amend the specification without notice.

MBP 8145

A